

119GU40EN

AUTOMATION  
FOR STREET BARRIERS

GARD 8 SERIES



INSTALLATION MANUAL

**G2080Z - G2080IZ**

## “IMPORTANT SAFETY INSTRUCTIONS FOR INSTALLATION”

“CAUTION: IMPROPER INSTALLATION MAY CAUSE SERIOUS DAMAGE, FOLLOW ALL INSTALLATION INSTRUCTIONS CAREFULLY”

“THIS MANUAL IS ONLY FOR PROFESSIONAL INSTALLERS OR QUALIFIED PERSONS”



## 1 Legend of symbols



This symbol indicates sections to be read with particular care.



This symbol indicates sections concerning safety.



This symbol indicates notes to communicate to users.

## 2 Destination and limits of use

### 2.1 Destination

The GARD 8 automatic barrier was designed for use in private or public car parks, in residential areas or in highly trafficked areas.



The use of this product for purposes other than as described above and installation executed in a manner other than as instructed in this technical manual are prohibited.

### 2.2 Limits of use

Passage width of up to 7.60 meters with a 4- to 8-second aperture time.

## 3 Standard followed

Came Cancelli Automatici is ISO 9001:2000 and ISO 14001 Quality and Environmentally certified. Came entirely designs and manufactures its products in Italy. The product in question compliant to the following legislation: *see Declaration of Compliance*.

## 4 Description

### 4.1 Gearmotor

GARD 8 was designed and manufactured by CAME CANCELLI AUTOMATICI S.p.A. and is compliant with safety regulations in force.

The cabinet is made of 2.5 mm painted galvanized steel or 2 mm AISI 304 satin-finish stainless steel. Inside the cabinet, the electro-mechanical gearmotor operates with a container for electric board and transformer.

Built with a anti-shearing safety system, it includes a safety contact in the inspection hatch lock.

There are two versions of the GARD 8 model:

G0280Z - painted galvanized steel automatic barrier with a 24V DC gearmotor with control panel;

G0280IZ - satin-finish AISI 304 stainless steel automatic barrier with 24V DC gearmotor with control panel;

The GARD 8 automation system is supplied with the following accessories:

G02000 - white-painted tubular aluminium rod, 2m (Ø 100 mm) complete with transparent slot cover;

G04000 - white-painted tubular aluminium rod, 4m (Ø 100 mm) complete with transparent slot cover;

G06000 - white-painted tubular aluminium rod, 6m (Ø 100 mm) complete with transparent slot cover;

G02040 - Ø 40 (yellow) balancing spring;

G04060 - Ø 50 (green) balancing spring;

G06080 - Ø 50 (green) balancing spring;

G06802 - Reinforcement for boom

G06803 - Telescopic joint and additional insert to attach the bar (this is obligatory for accesses of over 3.6m);

LB38 - Board for the connection of three 12V-6Ah emergency batteries;

The following accessories are optional to the GARD 8 automation system:

G02801 - Flashing dome lamp;

G02802 - Support for mounting the photoelectric cell (DIR) onto the cabinet (not applicable to barriers with bar and rack and/or mobile foot);

G02805 - Emergency battery housing support;

G028401 - Luminous cord for movement signalling;

G028402 - Luminous cord connecting cable;

G02807 - Fixed barrier support (obligatory for accesses of over 4m);

G02808 - Mobile barrier support (obligatory for accesses of over 4m);

G02809 - Red reflector strips (package of 20);

G0465 - Aluminium skirt (2 m modules);

G028011 - Door break-out bar bracket.

#### WARNINGS!

001G02802 Not for barriers fitted with 001G0465 skirt or 001G02808 swing-leg.

001G02808 For passage widths of max 7 m.

001G02807 For passage widths of over 7 m the swing-leg is mandatory.

001G0465 - 001G02808 cannot be used together.

**Important!** Check that the safety equipment and accessories are CAME originals; this is a guarantee that also makes the system easy to set up and upkeep.

## 4.2 Technical information

### GEARMOTOR

Power supply: 230V A.C. 50/60Hz  
 Motor power supply: 24V D.C. 50/60Hz  
 Max. absorption: 1.3A (230V) / 15A (24V)  
 Rated power: 300W  
 Max. torque: 600 Nm  
 Reduction ratio: 1/202


Opening time: 4÷8 s  
 Operative intermittence: intensive operation  
 Protection level: IP54  
 Weight: 91kg  
 Insulation class: I



## 4.3 Parts description


### AUTOMATION UNIT

- 1) Upper dome
- 2) Bar beam plate
- 3) Bar fitting intermediate plate
- 4) Cover for aluminium bar
- 5) Anti-shearing protection cover
- 6) Galvanized or stainless steel cabinet
- 7) Features for housing accessories
- 8) End-stop assembly
- 9) Lever arm
- 10) Transmission rod
- 11) Inspection hatch
- 12) Bar position adjustment buffers
- 13) Gearmotor
- 14) Control panel

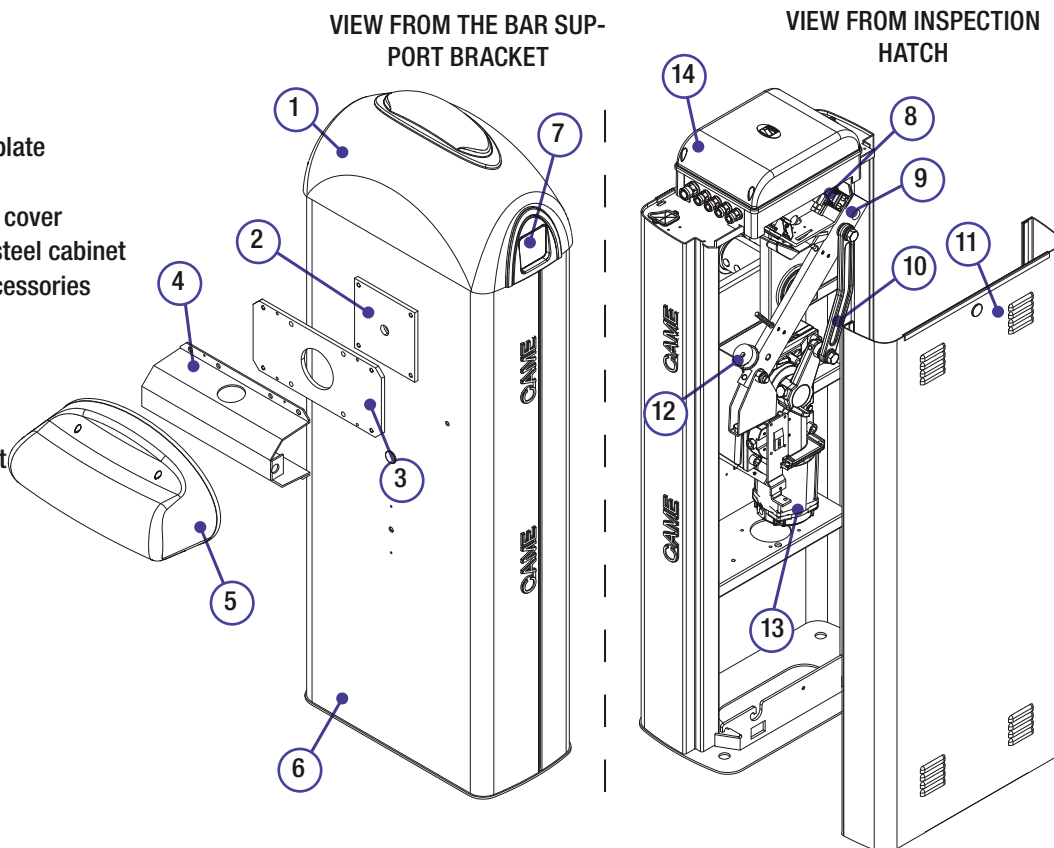


### ACCESSORIES

- 1) G02000/G04000 - aluminium bar, painted white, Ø 100 mm
- 2) G02040 - Ø40 (yellow) balancing spring
- 3) G04060 - Ø50 (green) balancing spring
- 4) G06080 - Ø55 (red) balancing spring
- 5) G02806 - Rack
- 6) G02802 - Support for DIR photoelectric cells
- 7) G028401 - Luminous cord
- 8) G02807 - Fixed barrier support
- 9) G02808 - Mobile barrier support
- 10) G02809 - Adhesive reflector strips
- 11) G02801 - Flashing dome lamp
- 12) G02805 - Emergency battery housing support
- 13) G06803 - Telescopic joint and additional insert to attach the bar

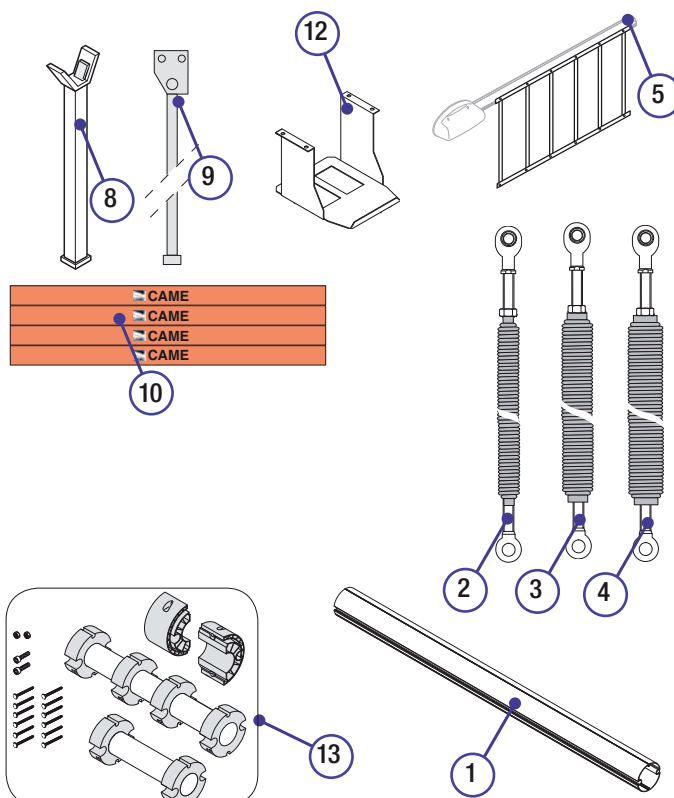

## 4.4 Size measurements

Measurements in mm

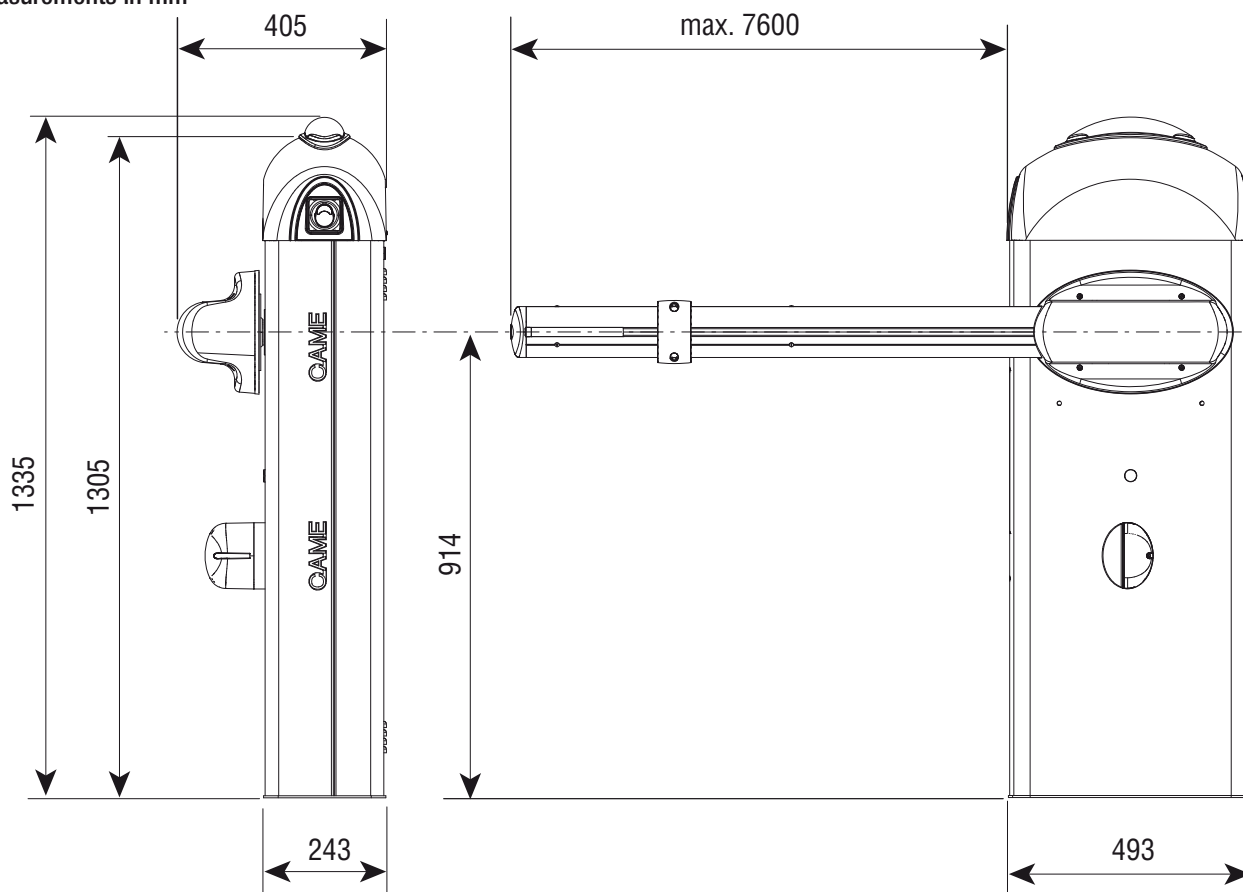

## 5 Installation

**⚠** Installation must be carried out by expert qualified personnel and in full observance of regulations in force.


### 5.1 Preliminary checks

**⚠** Before proceeding with the installation, it is necessary to:

- Make sure the area selected for the mounting of the base and for the unit itself presents no hazards;
- Provide for suitable omnipolar disconnection device with more than 3 mm between contacts to section power supply;
- $\oplus$  Connections inside the case made for protection circuit continuity are allowed as long as they include additional insulation with respect to other internal drive parts;
- Install suitable tubes and ducts for electric cable passage to guarantee protection against mechanical damage;

### 5.2 Tools and materials

Make sure all tools and materials necessary are within reach to install the edge in maximum safety, according to regulations in force. The following figure illustrates the minimum equipment for the installer.

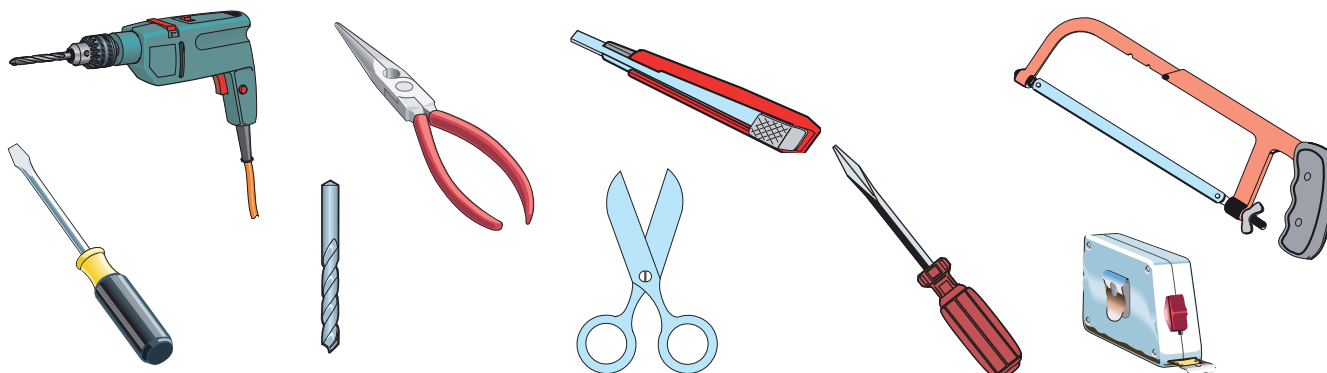


### 5.3 Cable list and minimum thickness

| Connections                | Type of cable                         | Length of cable<br>1 < 10 m | Length of cable<br>10 < 20 m | Length of cable<br>20 < 30 m |
|----------------------------|---------------------------------------|-----------------------------|------------------------------|------------------------------|
| Alimentazione 230V         | FROR CEI 20-22<br>CEI EN<br>50267-2-1 | 3G x 1,5 mm <sup>2</sup>    | 3G x 2,5 mm <sup>2</sup>     | 3G x 4 mm <sup>2</sup>       |
| Photoelectric cells TX     |                                       | 2 x 0,5 mm <sup>2</sup>     | 2 x 0,5 mm <sup>2</sup>      | 2 x 0,5 mm <sup>2</sup>      |
| Photoelectric cells RX     |                                       | 4 x 0,5 mm <sup>2</sup>     | 4 x 0,5 mm <sup>2</sup>      | 4 x 0,5 mm <sup>2</sup>      |
| 24V power supply accessory |                                       | 2 x 0,5 mm <sup>2</sup>     | 2 x 0,5 mm <sup>2</sup>      | 2 x 1 mm <sup>2</sup>        |
| Safety and control divices |                                       | 2 x 0,5 mm <sup>2</sup>     | 2 x 0,5 mm <sup>2</sup>      | 2 x 0,5 mm <sup>2</sup>      |
| Antenna connection         | RG58                                  | max. 10m                    |                              |                              |
| Metallic mass detector     | (see documents provided with product) |                             |                              |                              |

N.B.: An evaluation of the size of the cables with lengths other than the data in the table must be made based on the effective absorption of the connected devices, according to the instructions indicated by the CEI EN 60204-1 standards.  
For connections that require several loads on the same line (sequential), the size given on the table must be re-evaluated based on actual absorption and distances.



### 5.4 Standar installation

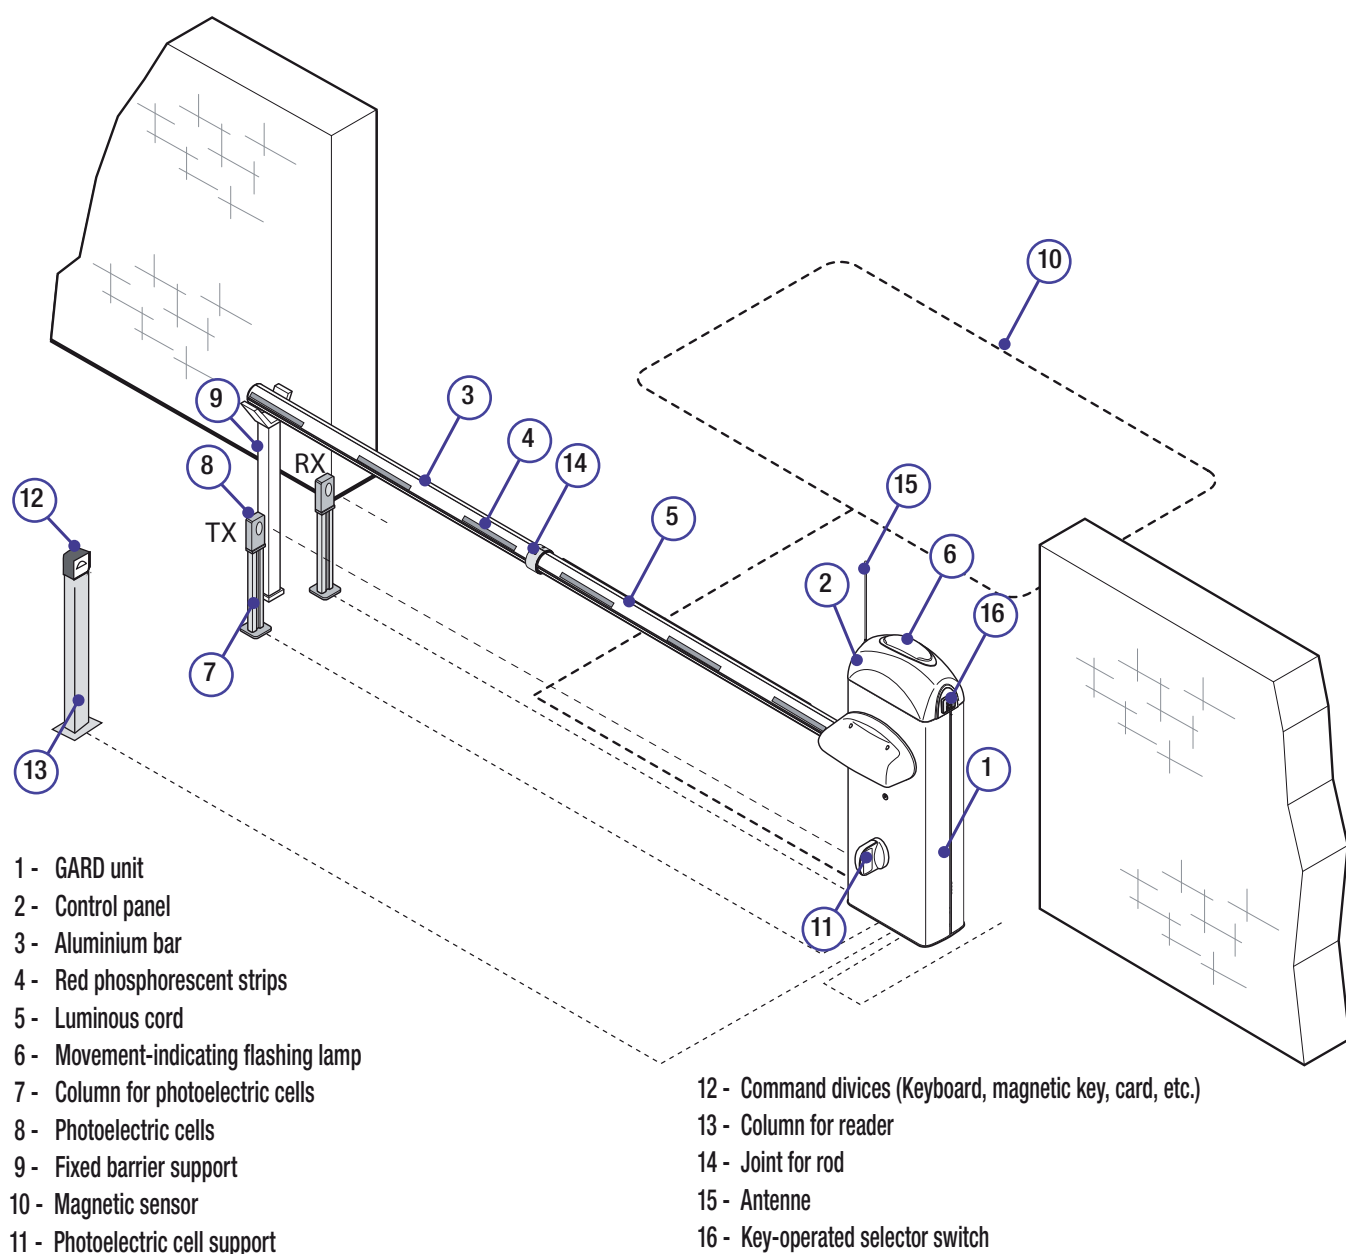

## 5.5 Fitting for unit base



**⚠** The following applications are only examples, as the space required for unit installation and the accessories vary depending on dimensions and therefore it is up to the installer to select the best solution.

- Prepare a hole to house the fixing base and prepare sheath tubes from the branch pit for the connections.  
N.B. the number of tubes depends on the type of system and the accessories you will hook up.

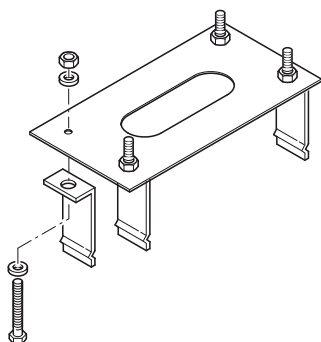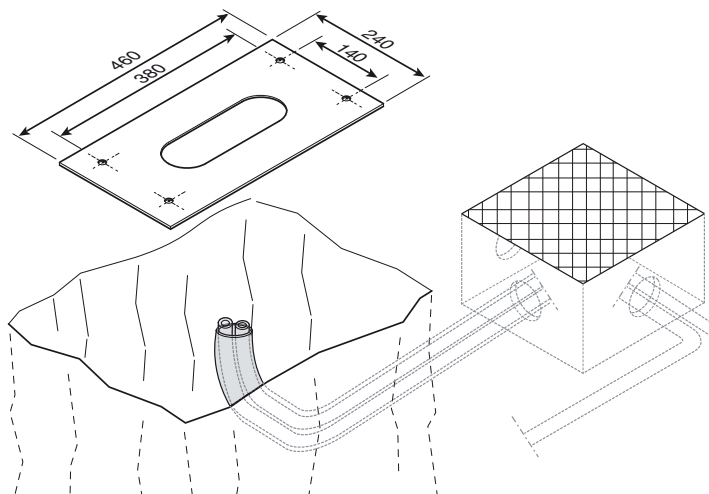

- Assemble the four anchoring clamps at the base.

- Fill the hole with concrete and immerse the clamps and the fixing base, paying particular attention to the sheath tube which must go through the hole at the base. The base must be perfectly level, clean and with the screw threads fully on the surface.  
Wait until everything is solidified – at least 24 hours.

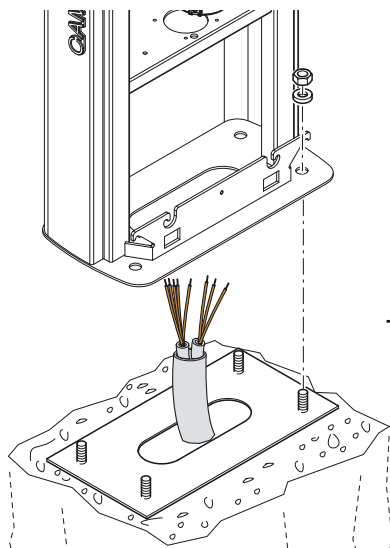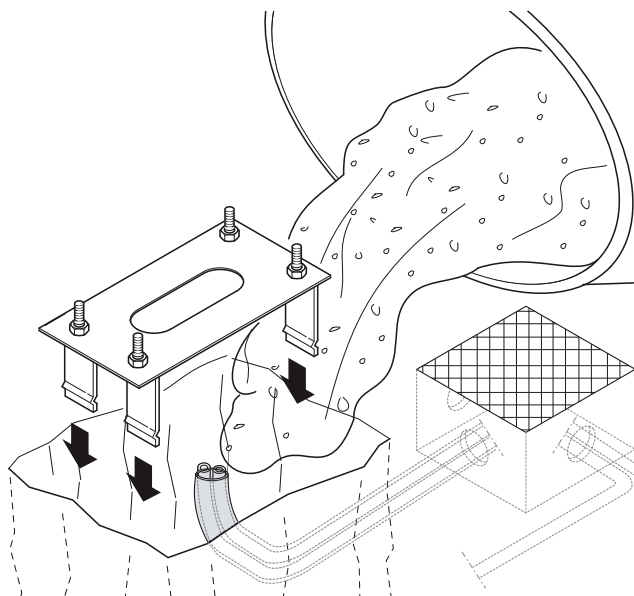




- Remove the nuts and washers from the threaded screws, position the cabinet on the base in correspondence with the 4 threaded screws and secure with the nuts and washers.

**Note:** We recommend installing the cabinet with the inspection hatch facing the internal area.




## 5.6 Installation of the Unit

- Open the door with the proper key, remove the top dome and take out the inspection door.

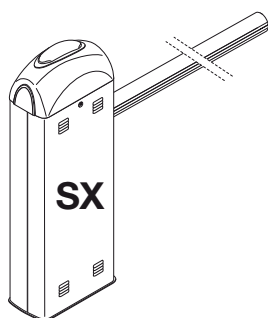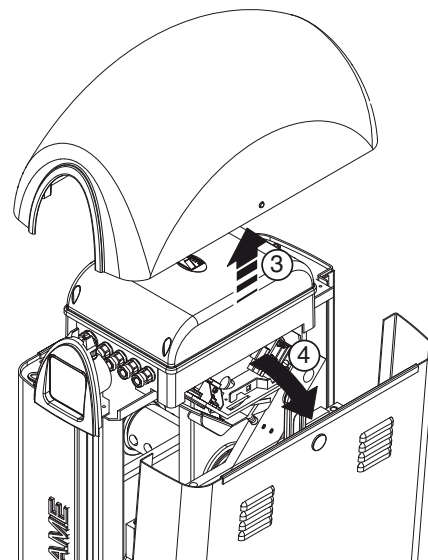
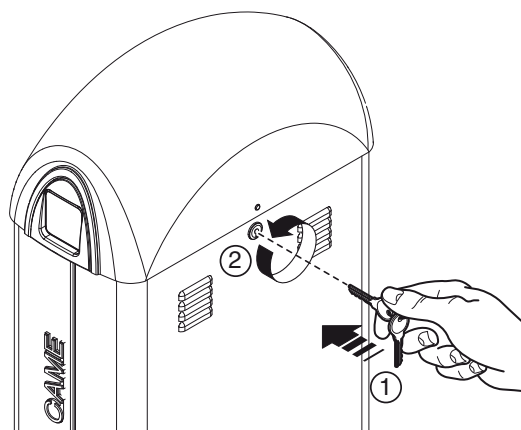


- The barrier is designed to be installed on the left of the gateway as seen from inside.


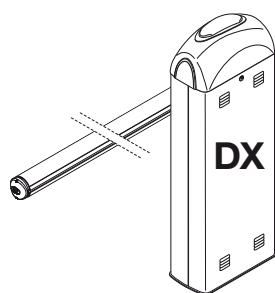



Should installation on the right be required, the direction of the bar's opening must be inverted. Proceed in the following manner:

- remove the spring securing bracket and the transmission rod from the lever arm;
- loosen the motor support grub screw;
- rotate the lever arm by 90°;

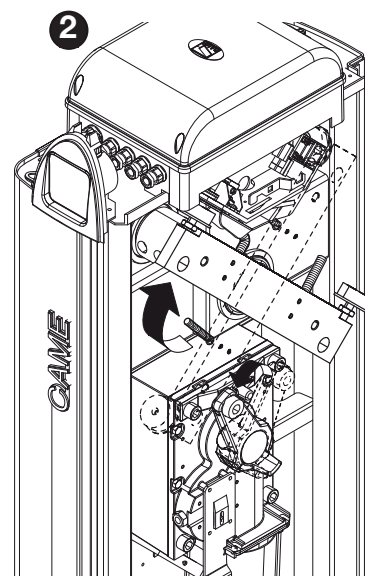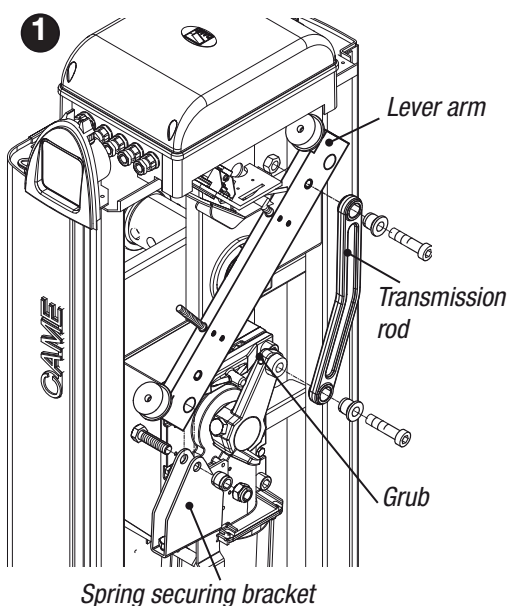


- Fix the spring securing bracket and the transmission rod on the side opposite that of lever arm;
- tighten the grub screw;
- invert the motor's M-N phases and the FA and FC endstop wires on the control panel terminal.

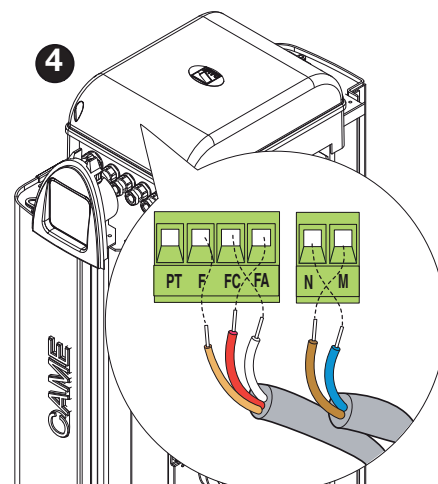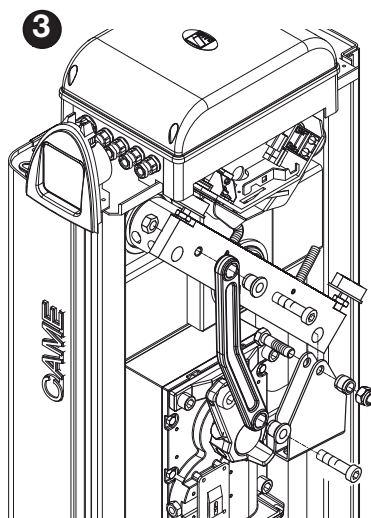

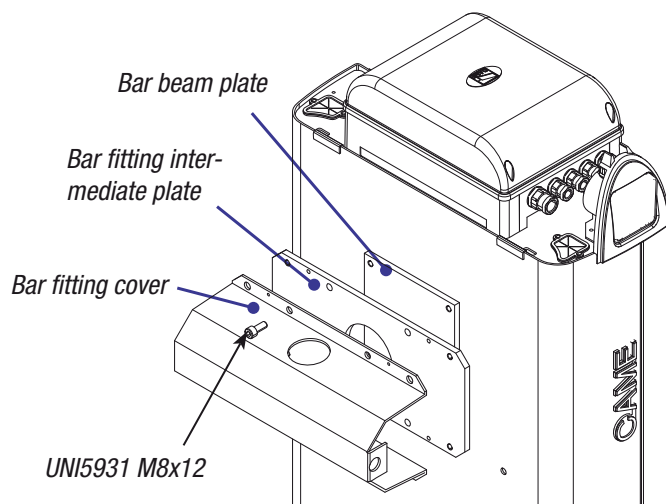


- Position the middle plate between the fitting plate and the bar-fitting cover, and put in one UNI 5931 M8x20 screw without tightening it to facilitate bar assembly.


- Insert the bar in the fitting cover and secure it with screws.

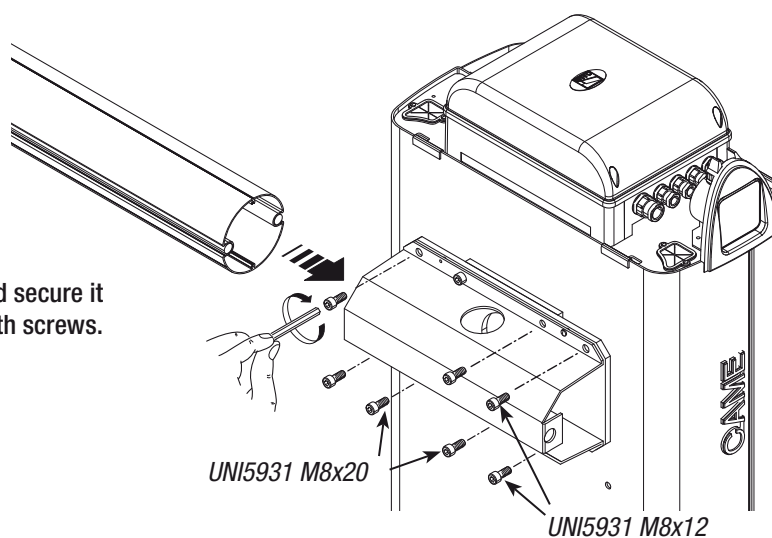

- Measure the length of the bar, cut the bar slot to the same length.

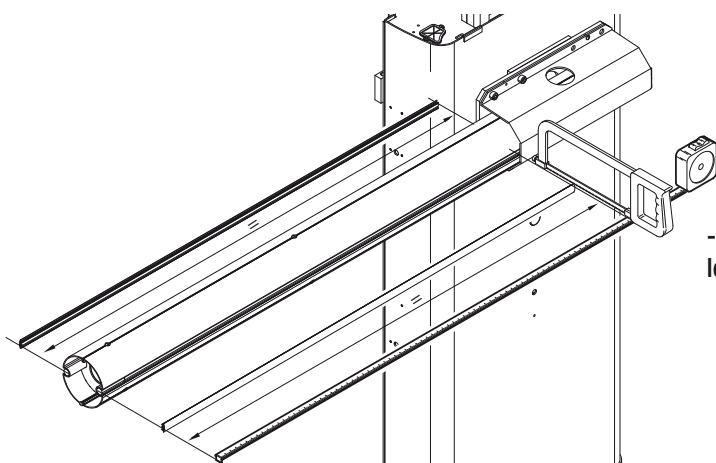


- Insert it in the bar's conduit, a procedure that should be carried out on both sides.  
Insert the shock-resistant profile and cut excess length. Lastly, secure the bar end plug with the screws provided.

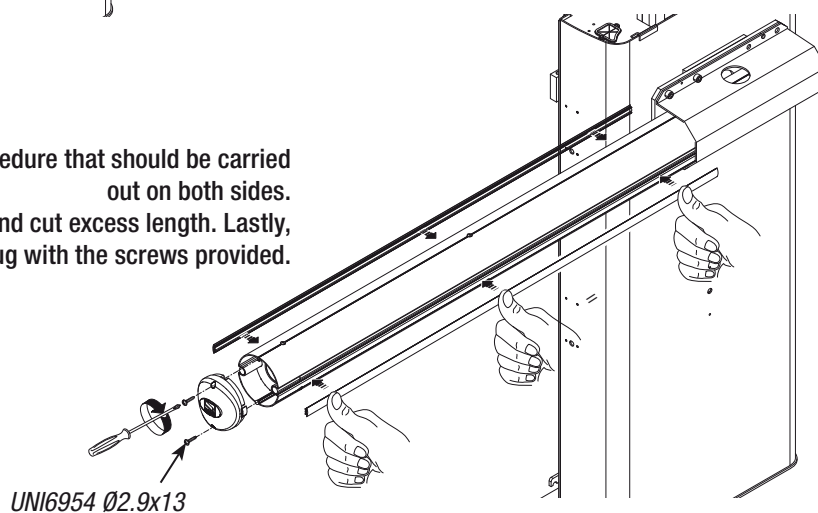




- Tighten the anti-shearing protection cover to the bar fitting with UNI6954 Ø3.9x19 screws.

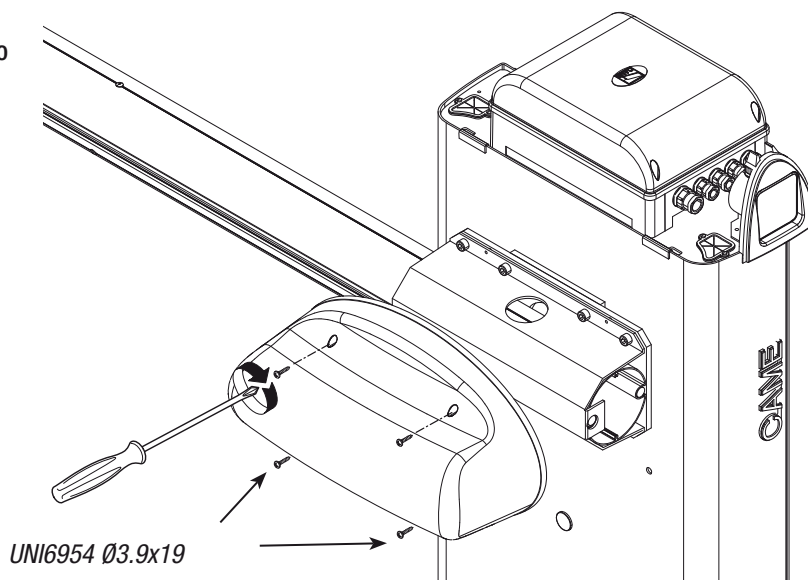

## 5.7 Bar balancing

- Prior to bar balancing, select a suitable spring depending on the situation at hand. See table below:

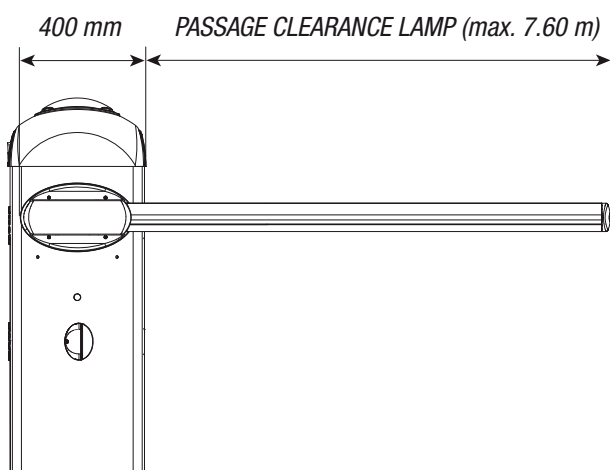


### SPRING TYPES

- Spring G02040  $\varnothing_e = 40$  mm
- Spring G04060  $\varnothing_e = 50$  mm
- Spring G06080  $\varnothing_e = 55$  mm

### Passage clearance lamp (m)




|  |               | 2.0 | 2.5 | 3.0 | 3.5 | 4.0 | 4.5 | 5.0 | 5.5 | 6.0 | 6.5 | 7.0 | 7.6 |
|--|---------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Bare bar*  | first spring  |     |     |     |     |     |     |     |     |     |     |     |     |
|  | second spring |     |     |     |     |     |     |     |     |     |     |     |     |
| Bare bar* + mobile barrier support                 | first spring  |     |     |     |     |     |     |     |     |     |     |     |     |
|  | second spring |     |     |     |     |     |     |     |     |     |     |     |     |
| Bare bar* + luminous cord                          | first spring  |     |     |     |     |     |     |     |     |     |     |     |     |
|  | second spring |     |     |     |     |     |     |     |     |     |     |     |     |
| Bare bar* + luminous cord + mobile barrier support | first spring  |     |     |     |     |     |     |     |     |     |     |     |     |
|  | second spring |     |     |     |     |     |     |     |     |     |     |     |     |
| Bare bar* + rack                                   | first spring  |     |     |     |     |     |     |     |     |     |     |     |     |
|  | second spring |     |     |     |     |     |     |     |     |     |     |     |     |
| Bare bar* + rack + luminous cord                   | first spring  |     |     |     |     |     |     |     |     |     |     |     |     |
|  | second spring |     |     |     |     |     |     |     |     |     |     |     |     |

\* By Bare bar we mean a bar complete with the transparent slot cover and end plug.

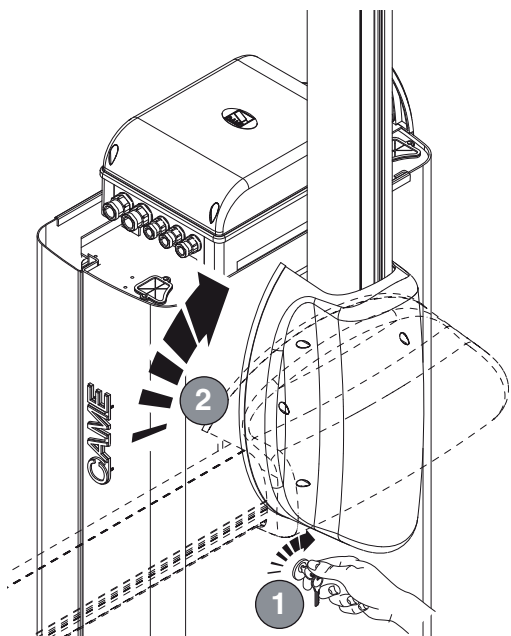




- Release the gearmotor and position the bar vertically, and then refasten the gearmotor.

- Insert the UNI5739 M12X70 screw into the spring securing bracket and tighten the UNI5588 M12 nut to the screw (1-2). Tighten the screw to spring (2) and the tie rod to the part underneath (3-4).

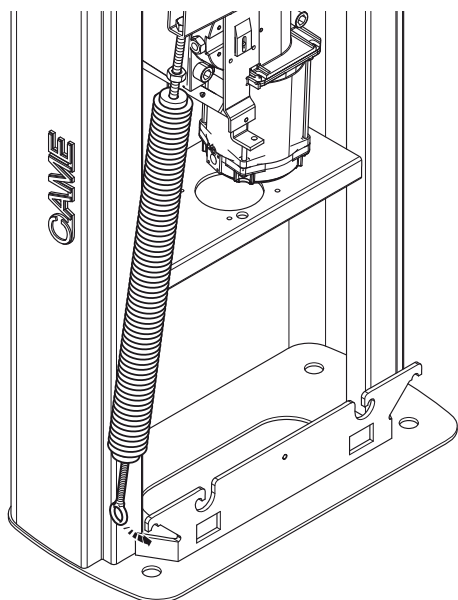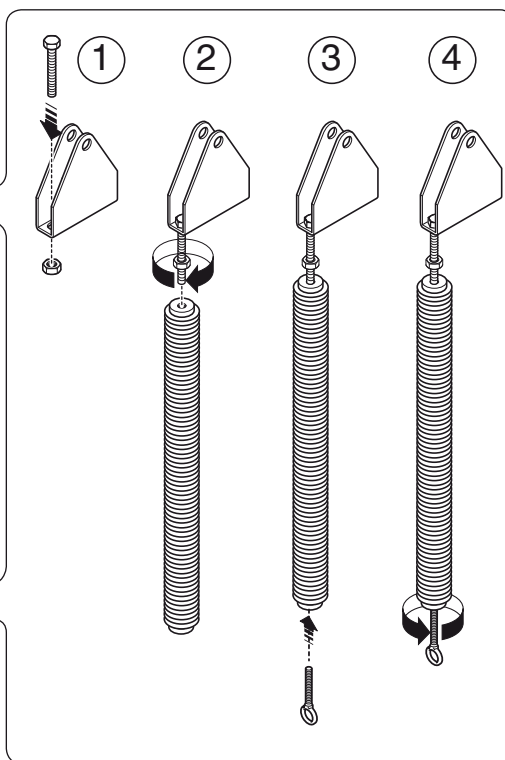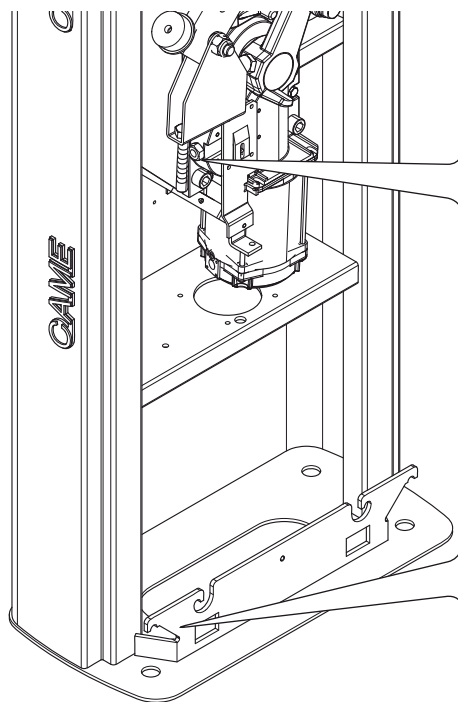

- Hook the tie rod to the anchoring racket. Perform the same procedure if there is a second screw.

- Release the gearmotor and manually turn the spring to increase or decrease traction until the bar rests at 45°.

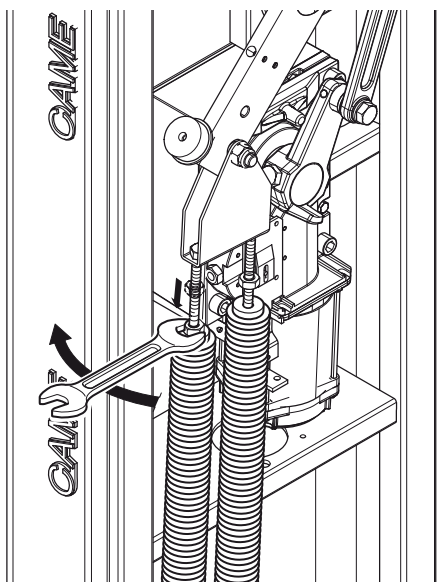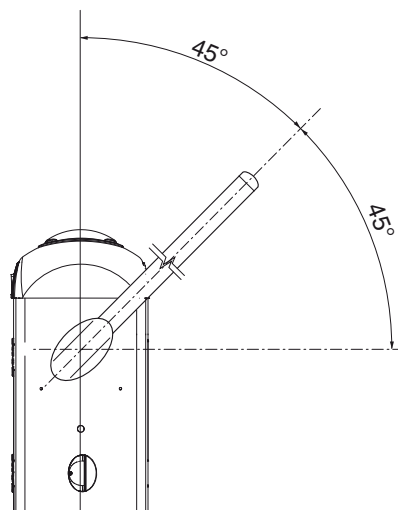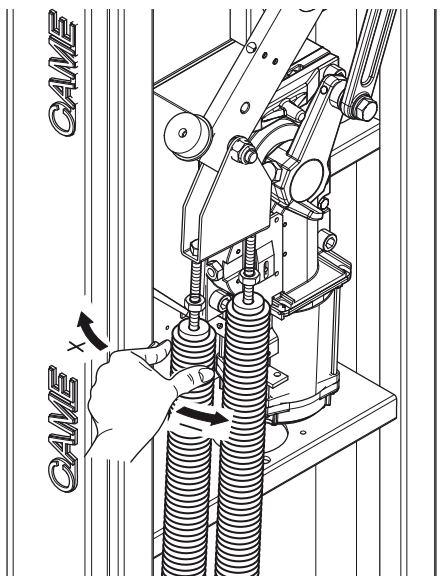

- Tighten the blocking nut and refasten the gearmotor.

**Note:** make sure the spring functions properly:

- the spring is loose when the bar is in the vertical position (at rest)
- the spring is tight when the bar is in the horizontal position (tense).

- Perform any electrical connections to the control panel (*see electrical connections paragraph*).


## 5.8 End stop adjustment

N.B.: perform this procedure after finishing the electrical connections.

Close the door and power up the system, activate the barrier to make sure it is parallel with the closed and at about 89° when open.


**⚠ Warning!** For greater safety and better unit performance, the bar's opening and closing operations should be carried out with the inspection hatch closed!


If any adjustment of the vertical position (= opening) is needed, open the inspection door and rotate the free damper clockwise (to increase the bar's run) or counter-clockwise (to decrease the run).

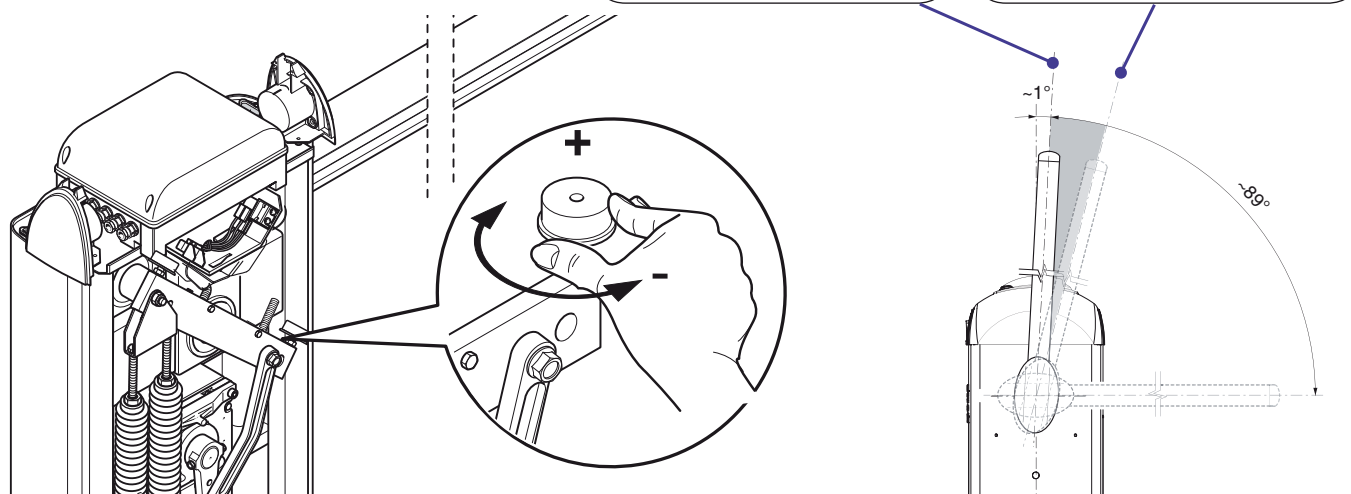

Similarly, open the bar and adjust the free damper, to regulate the horizontal position (= closing).


**⚠ Warning!** The bar's stop position is preceded by the slowing phase by means of a tab and spring system that activates the slowing-down microswitch prior to the bar's total stop.

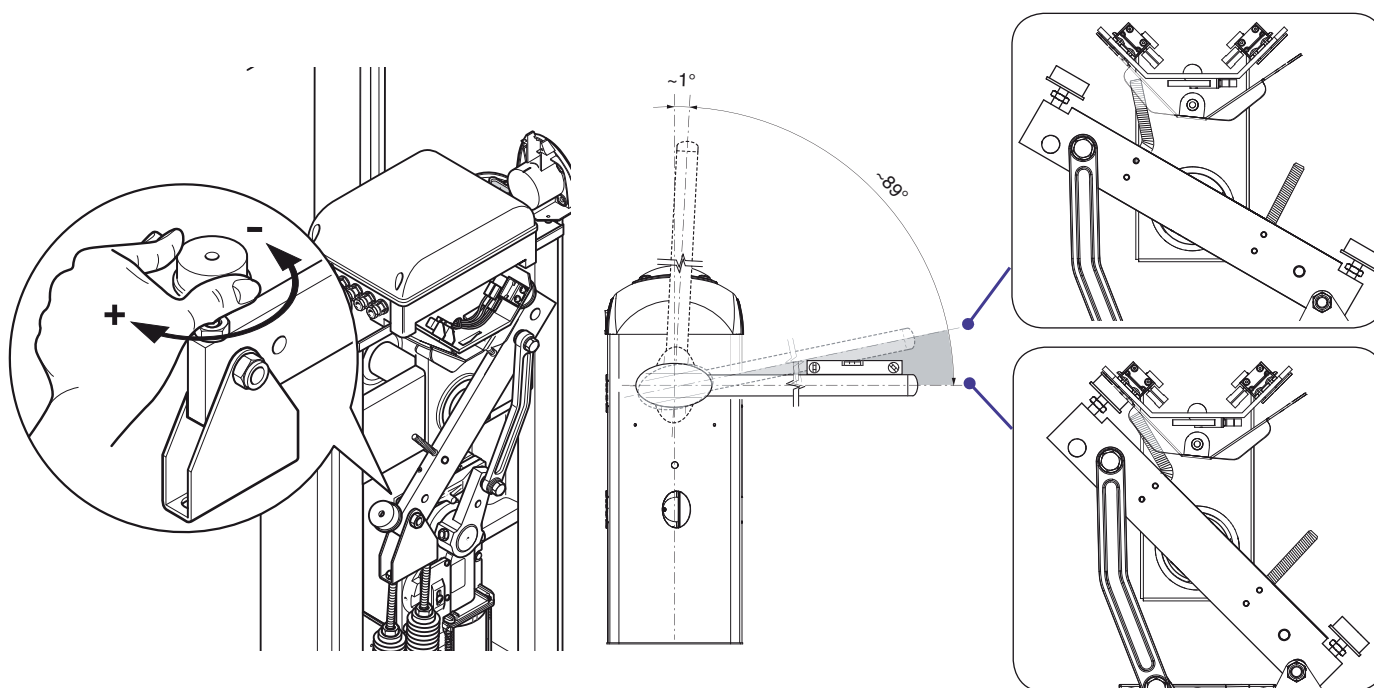


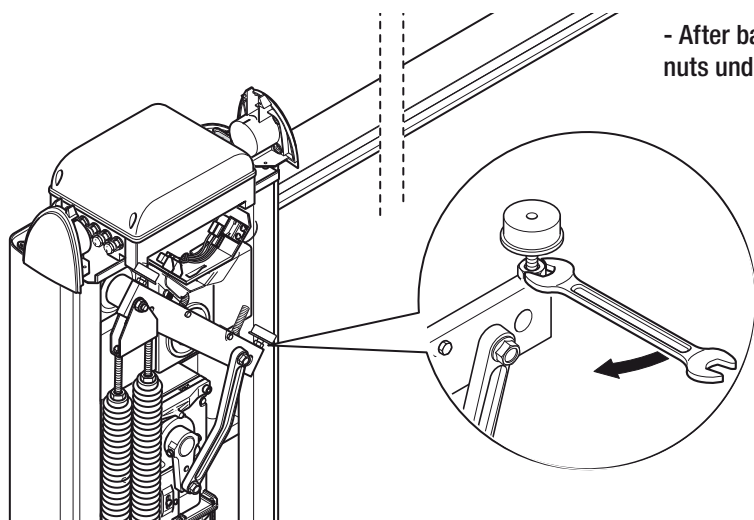


- After bar opening and closing adjustment, tighten the locking nuts under the dampers.

- After making adjustments and settings from the control panel, put the container lid in place and secure with screws....

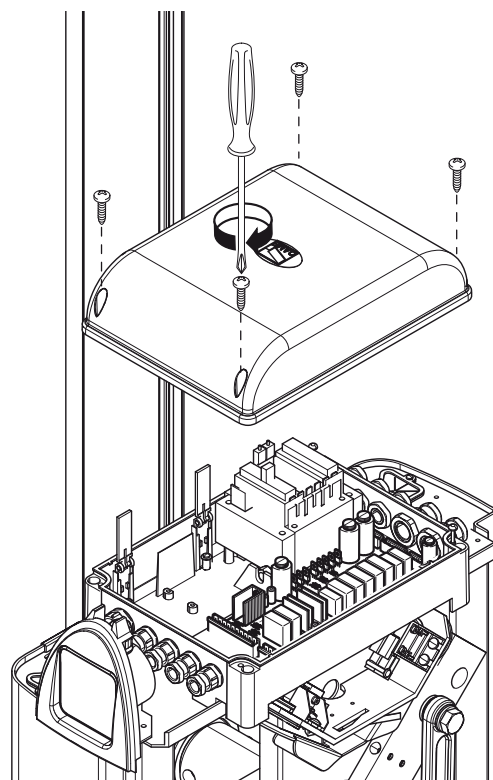

- ...place back the inspection door and the upper dome. Lock the door with the key.

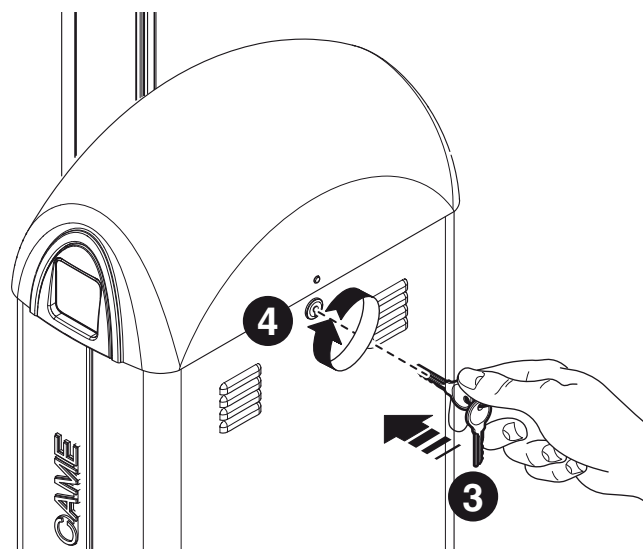
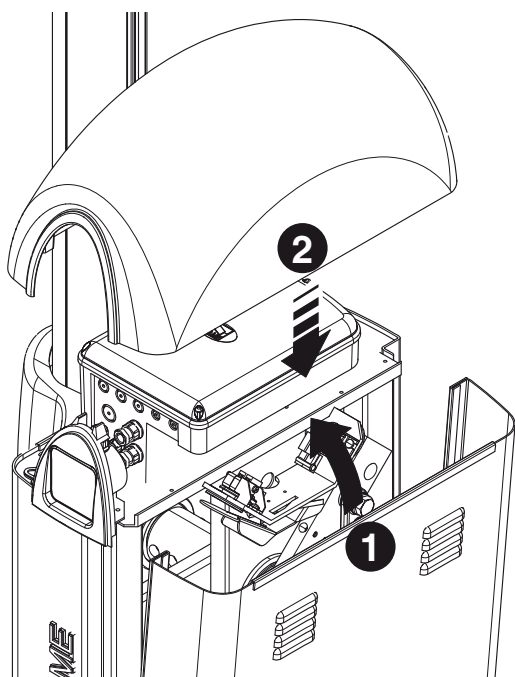


## 5.9 Manual release of the barrier

- Insert the key into the lock and turn it clockwise. Manually raise the bar and block it again by turning the key counter-clockwise.



**⚠ WARNING!** The release procedure may constitute a hazard for the user when, for whatever reason – the bar is fixed improperly to the housing during assembly, or the bar is cracked or broken in an accident, and so on – the tension springs no longer provide balance! These can thus cause a **brusque rotation of the bar attachment and/or of the bar itself.**

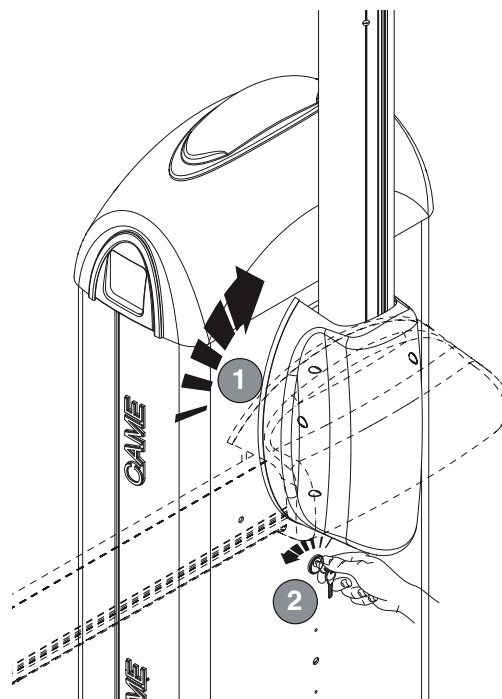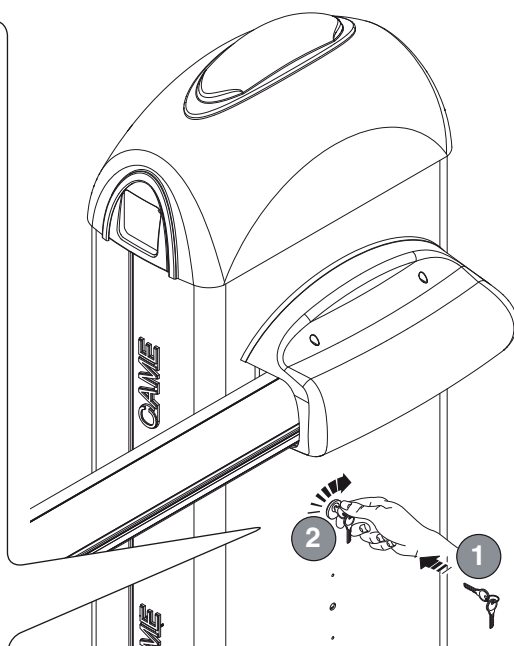

## 6 Description control panel

This product is engineered and manufactured by CAME cancelli automatici s.p.a. and complies with current safety regulations.

The control panel works on 230V a.c. of power, 50/60Hz frequency.

Both command and control devices and accessories are 24V powered. **Warning!** Accessories must not exceed 40 W overall.

The control unit is fitted with an amperometric device which constantly regulates the motor's drive coefficient.

When the bar runs into an obstacle, the amperometric sensor immediately detects an overcharge in the drive and redirects the gate's direction of movement, and:

- during opening: the bar stops;
- during closing: the bar reverses its direction until it opens completely; automatic closure is thus activated.

**Caution!** after three consecutive direction reversals, the bar will remain up and automatic closure will be discontinued. To close the gate, use the radio remote control or the push-button.

All connections are protected by quick fuses, see table.

The card provides and controls the following functions:

- automatic closing after an open-command;
- immediate closure;
- pre-flashing by the motion indicator;
- obstacle detection when gate is still in any position;
- slave function;
- function that increases the braking action of the barrier.

The following command modes are possible:

- open/close;
- open/close and maintained action;
- open;
- complete stop.

Apposite trimmers regulate:

- the automatic closing run time;
- the amperometric device's detection sensitivity;

Optional accessories:

- Flashing Crown and Luminous band.
- bar open light marks the position of opening of the bar; it turns off after the closing operation;
- LB38 Card, provides power supply through a battery, in case of a power outage. When power comes back on, it also re-charges the batteries (see relative technical literature).


**Warning!** Before acting on the machinery, cut off the main power supply and disconnect any emergency batteries.

| TECHNICAL FEATURES                   |                  |
|--------------------------------------|------------------|
| Power supply                         | 230 V - 50/60 Hz |
| max. rated power                     | 400 W            |
| Power draw when idling               | 25 W             |
| Max power of 24V accessories         | 40 W             |
| Insulation rating                    | II               |
| Material                             | ABS              |
| FUSES                                |                  |
| protection:                          | fuse type:       |
| Motor/s                              | 10 A-F           |
| Electronic board (power supply line) | 3.15 A-F         |
| Accessories                          | 2 A-F            |
| Control devices                      | 630 mA-F         |



## 6.1 Main components


- |  |  |
|--|--|
| 1 - Accessories fuse                               | 10 - Code storing button                               |
| 2 - Line fuse                                      | 11 - Signalling LEDs for radio codes/automatic closing |
| 3 - Control unit fuse                              | 12 - Adjustment connectors for deceleration speed      |
| 4 - Motor fuse                                     | 13 - Connectors for LB38 battery charger               |
| 5 - Accessories terminals                          | 14 - Command-type selection jumper for button 2-7      |
| 6 - Radio-frequency card input (see table page 19) | 15 - Transformer                                       |
| 7 - SENS Trimmer: adjusts amperometric sensitivity | 16 - Power supply Terminals                            |
| 8 - TCA Trimmer: adjusts automatic closing time    | 17 - Motor Terminals                                   |
| 9 - "Function selector" Dip switch                 | 18 - Endstop Terminals                                 |

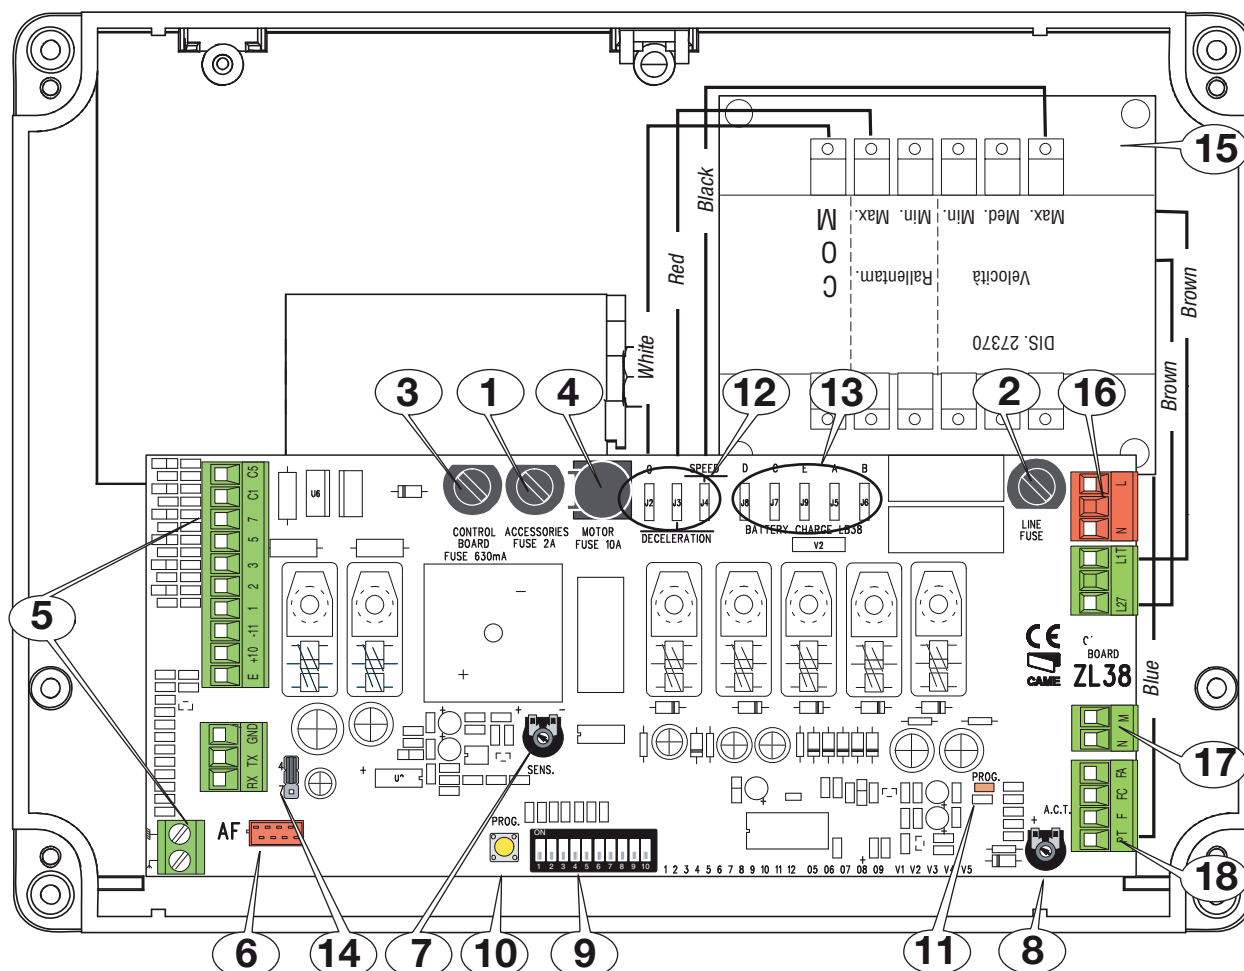

## 6.2 Electrical connections

### Gearmotor, mechanical stops

Description of required electrical connections. When installing on the right side, see page 7.

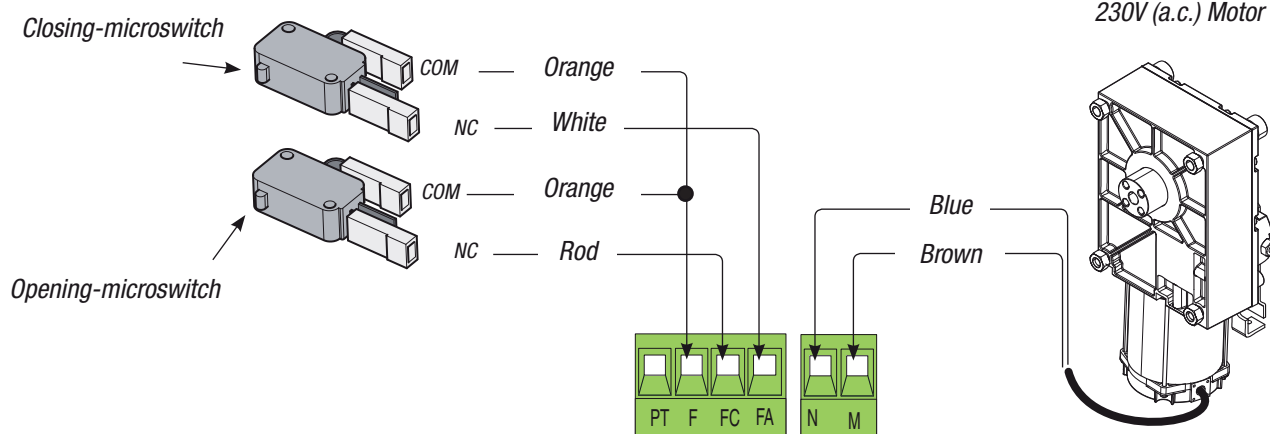


## Power supply

Terminals for powering the following accessories:

- 24V a.c. (normally alternated power);
  - 24V a.c. (continuous power) when the emergency batteries are in operation;
- Overall power allowed: 40W

Power supply 230V (a.c.) 50/60 Hz

Cable lug with bolt and washer for connecting to earth

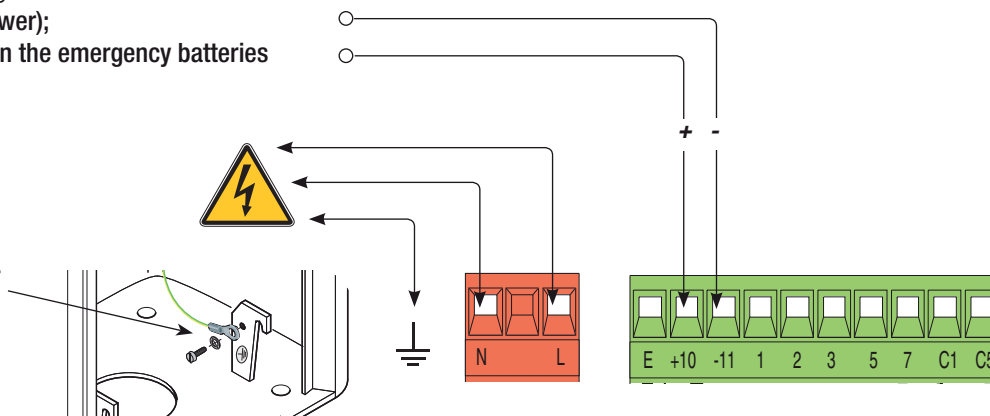

## Command devices

**Stop button (N.C. socket)** - Bar stop button. Excludes automatic closing. For motion to resume, press the command button or the remote control button.


**If not used, set Dip 9 to ON.**

**Opening button (N.O. contact)** - Bar opening command.

**Command button (N.O. contact)** - Bar opening or closing button. By pressing on the button, the bar opens or inverts its movement depending on the selection made on Dipswitch 2. Check setting of the Jumper (n. 14, page 15), as per figure..

**Closing button (N.O. contact)** - Bar closing command. Obligatory in the event of "maintained action" function.


Set jumper according to figure.

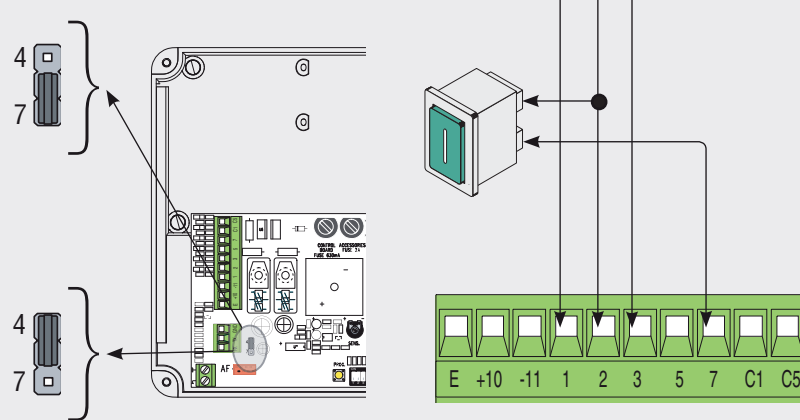

**(N.C. )Contact for "immediate closing"**

- Automatic bar closing after an obstacle comes within the range of the safety devices.


**If not used, set Dip 8 to ON.**

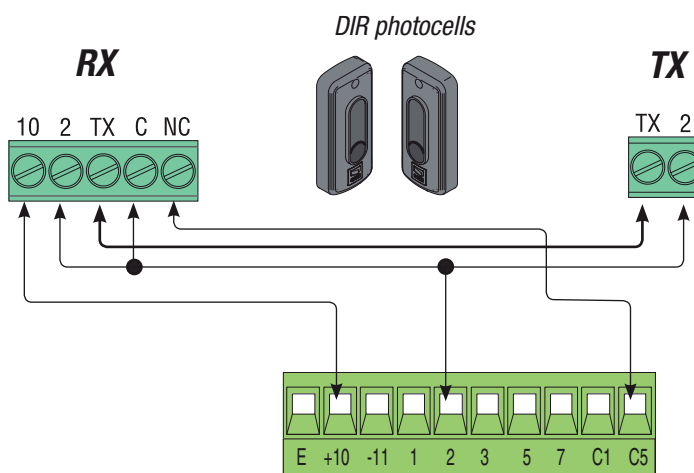

## Warning devices

**Flashing Crown and/or Luminous band** (Contact rating: 24V - 32W max.) - Flashes when bar is opening and closing.


**Open barrier warning light** (contact rating: 24V - 3W max.) - Signals when bar is in 'up' position, turns off once bar is down.

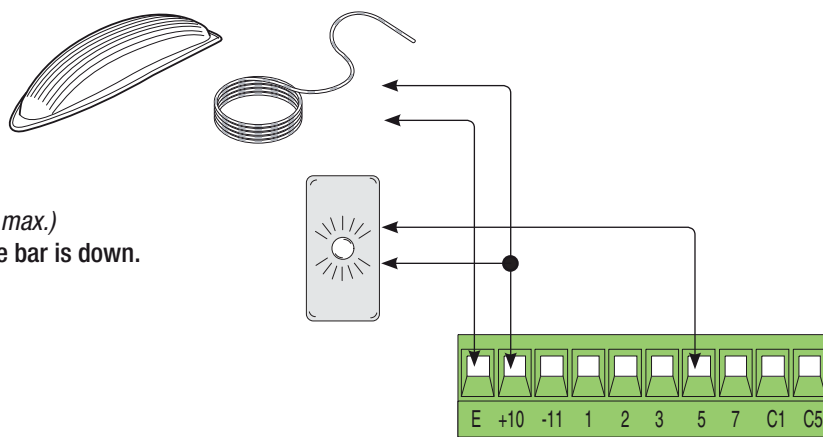

## Safety devices

**(N.C.) contact for «re-open during closing phase»**  
- Input for safety devices such as photocells, sensitive edges and other EN 12978 compliant devices. When bar leaves are closing, opening the contact causes reversal until total opening is obtained.


**If not used, short circuit contact 2-C1.**

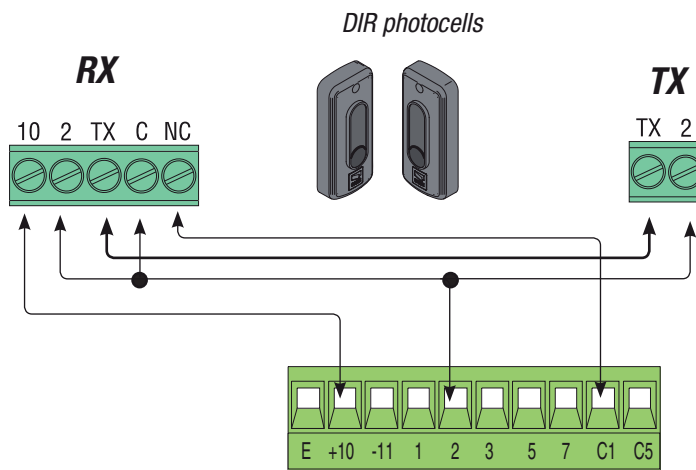


## 6.3 Adjusting movement and deceleration speeds

To adjust the opening and closing speed, move transformer faston labeled "A" to [Velocità] -> [Min.]/[Med.]/[Max.].

To adjust the decelerations, move the faston "B" to [Rallentam.] -> [Min.]/[Max.].

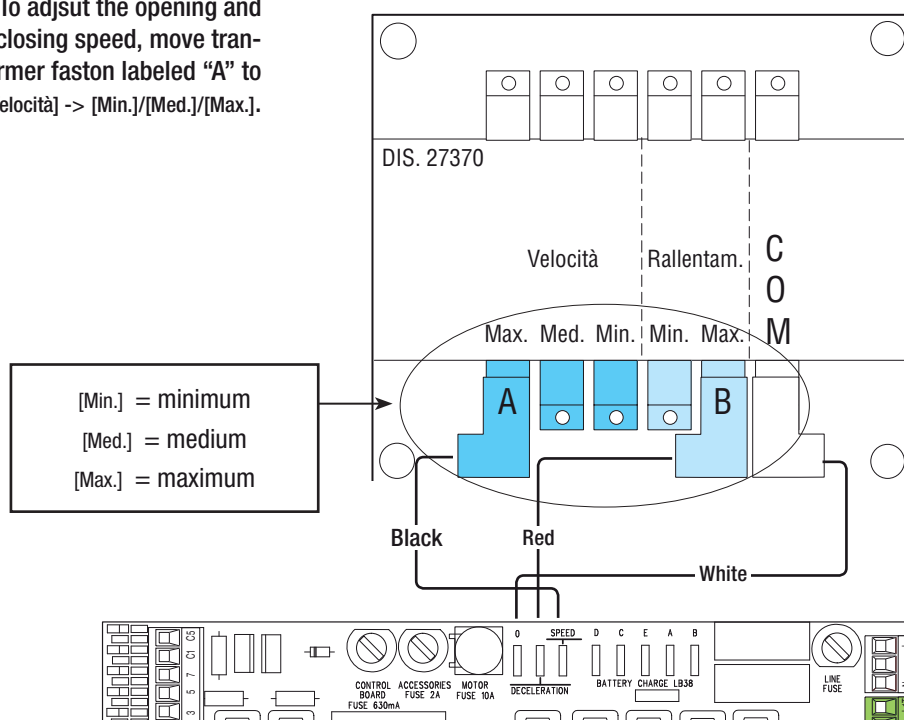

## 6.4 Selecting functions


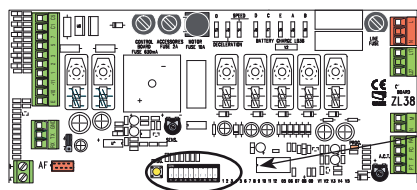


Default setting



- 1 ON - **Automatic closing** - the automatic closing timer is activated when on opening the bar leaf has reached the full open stroke. The time is preset and adjustable, and is subject to the action of any safety devices. It does not activate after a total safety "stop" or during a power outage (1 OFF - deactivated);
- 2 OFF - **"Open-close"** function with button [2-7] and remote control (with built-in radiofrequency card).
- 2 ON - **"Open only"** function with remote control (featuring built-in radiofrequency card).
- 3 ON - 24V power output on contact (10-E) bar in motion and in open position;
- 3 OFF - 24V power output on contact (E-10) bar in motion;
- 4 ON - **Maintained action** - the bar works by keeping the button pressed, one button [2-3] for opening, and one button [2-7] for closing (Set jumper n°14 according to figure pag. 16).
- 5 ON - **Pre-Opening and closing flasher** - Following an opening and closing command, the flasher connected to [10-E], flashes for 5 seconds before motion begins.
- 6 ON - **Obstacle detected** - When motor is stopped (bar closed or after a total stop command) it prevents any movement if safety devices, such as photocells, detect any obstacles..
- 7 ON - **"Slave" function** - Activate when two barriers are coupled (see connecting two coupled barriers paragraph);
- 8 OFF - **Immediate bar closing** - Immediately closes bar when obstacle comes within the range of the safety devices. Insert safety device on [2-C5]; if unused set Dipswitch to ON.
- 9 OFF - **Total stop** - This function stops the bar and then excludes any automatic closing cycle; to set in motion again, use either the keypad or transmitter. Insert the safety device in [1-2]; If unused, set DIP switch to ON.
- 10 ON - **Brake Action** - increases braking action on the bar when closing (10 OFF – deactivated).

## 6.5 Adjustments

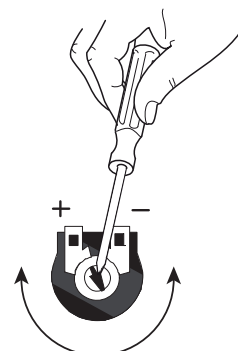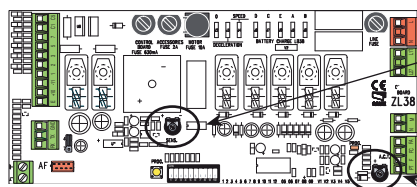


### ELENCO TRIMMER DI REGOLAZIONI:

- **«A.C.T.»** Sets the waiting time while open. Once this time has elapsed, closing automatically takes place. The waiting time may be set from 1 to 120 seconds.
- **«SENS»** Sets the amperometric sensitivity that controls the force generated by the motor during movement; if the force exceeds the set level, the system intervenes by inverting the direction of motion.

## 7 Activating the remote control


### Antenna

Connect the antenna's RG58 cable to the apposite terminals.

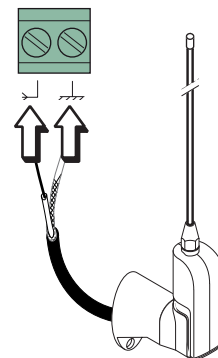


### Radiofrequency card

Lock the radiofrequency card into the electronic card **AFTER CUTTING OFF THE POWER SUPPLY** (or after disconnecting the batteries).  
N.B.: the electronic card only recognises the radiofrequency card when the power is on.

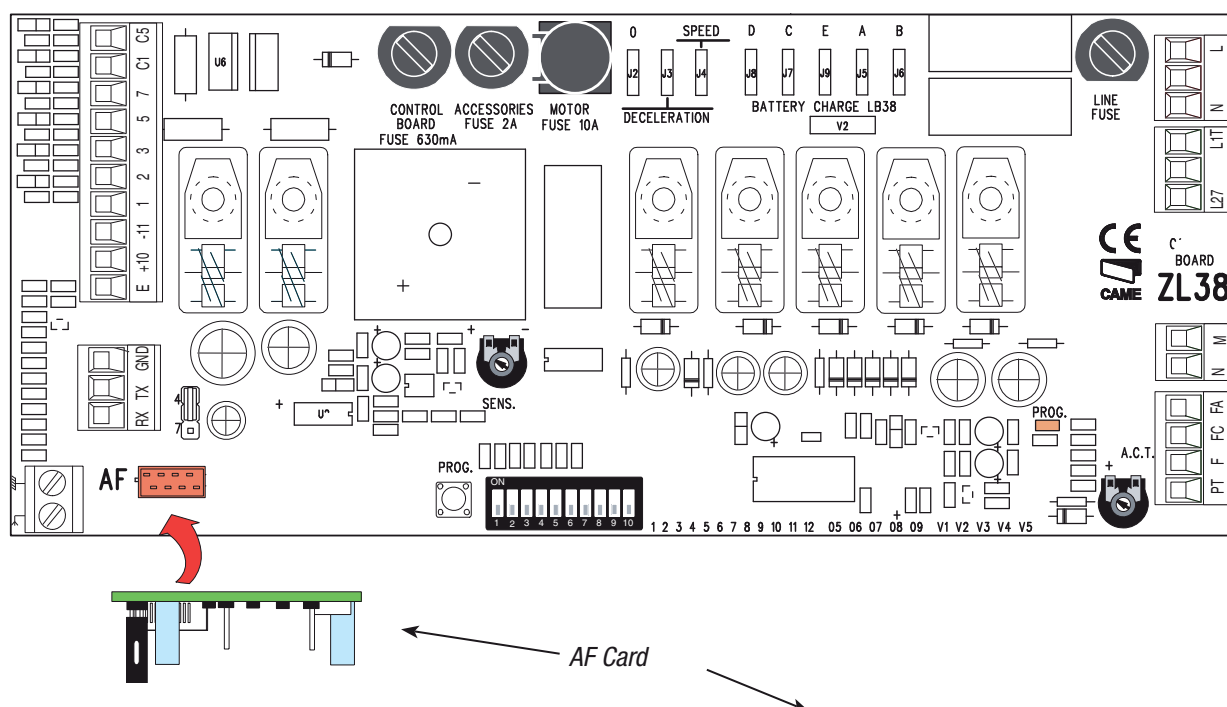

| Frequency-MHz | radiofrequency card | Series of transmitters |
|---------------|---------------------|------------------------|
| FM 26.995     | AF130               | TFM                    |
| FM 30.900     | AF150               | TFM                    |
| AM 26.995     | AF26                | TOP                    |
| AM 30.900     | AF30                | TOP                    |
| AM 40.685     | AF40                | TOUCH                  |
| AM 433.92     | AF43S / AF43SM      | TAM / TOP              |
|               | AF43SR              | ATOMO                  |
|               | AF43S / AF43TW      | TWIN                   |
| AM 868.35     | AF868               | TOP                    |

### Transmitters

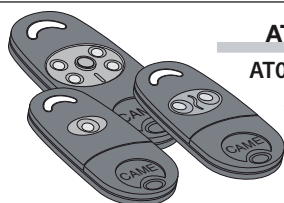


**ATOMO**  
AT01 • AT02  
AT04

See instructions attached to AF43SR radiofrequency card

See attached instructions


### TOUCH

TCH 4024 • TCH 4048

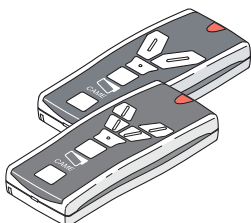


### TOP

TOP-432A • TOP-434A TOP-302A • TOP-304A

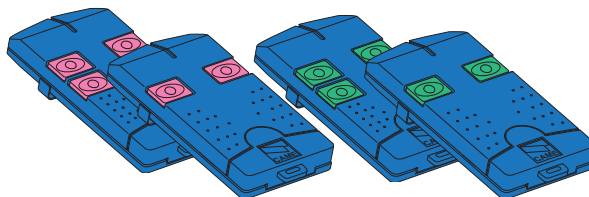


### TOP

TOP-432NA • TOP-434NA  
TOP-862NA • TOP-864NA  
TOP-432S

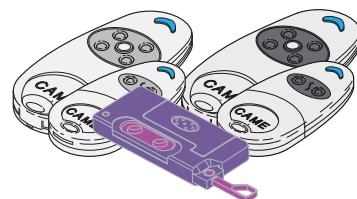


### TWIN

TWIN 2 • TWIN 4

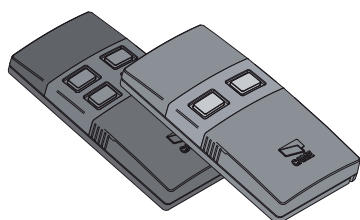


### TAM

T432 • T434 • T438  
TAM-432SA

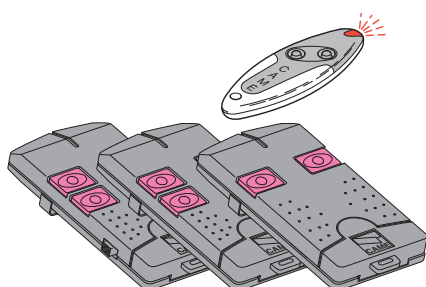


### TFM

T132 • T134 • T138  
T152 • T154 • T158

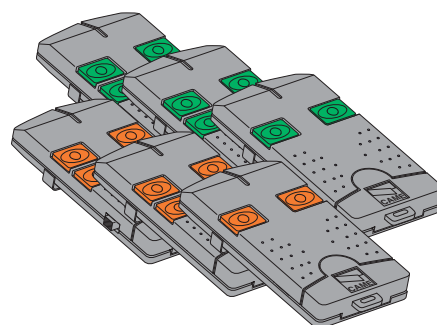


## Memorisation

- Keep pressed the **PROG** button on the electronic card. The LED will flash.

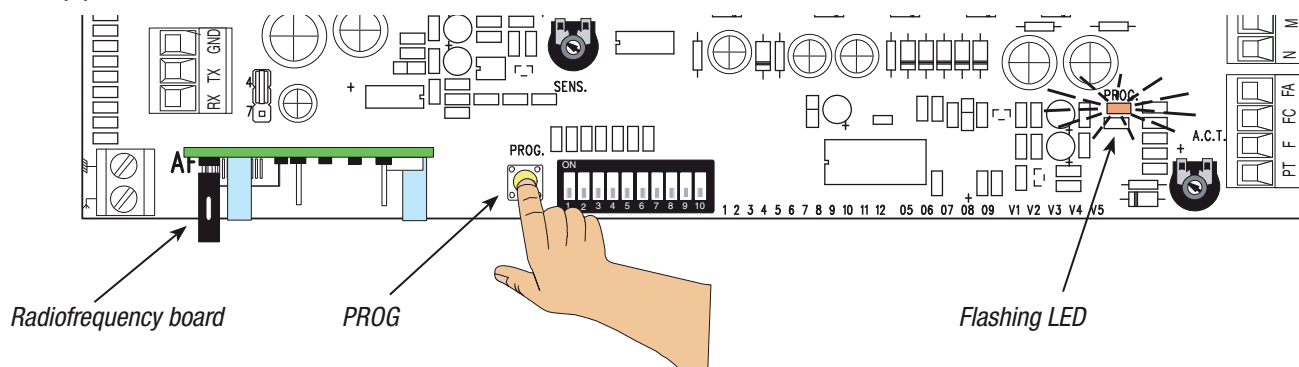

- Press the button of transmitter to memorise. The LED will stay on to signal memorisation.

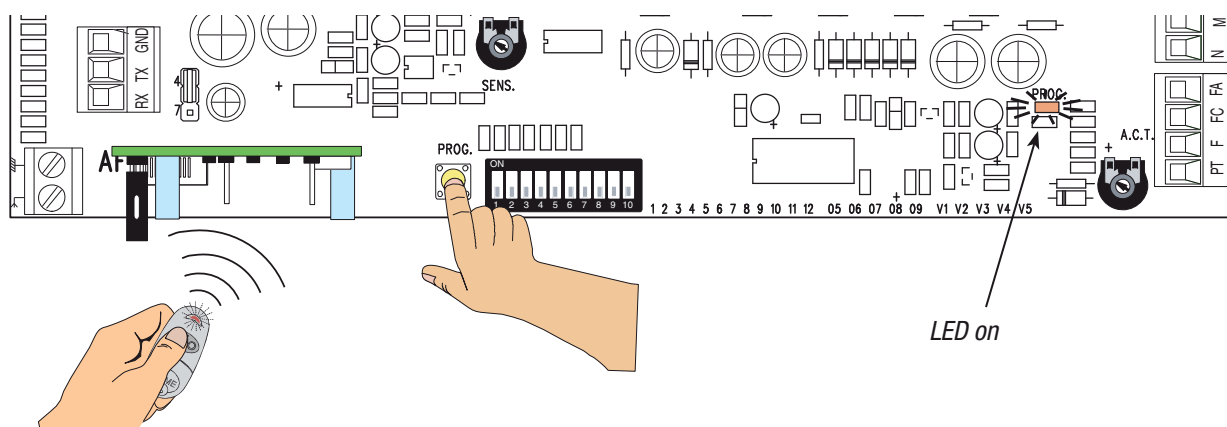







## 8 Connecting two coupled barriers to one command

- Determine the Master and Slave barrier.

SX

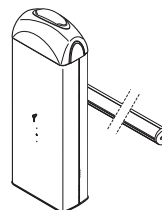



DX

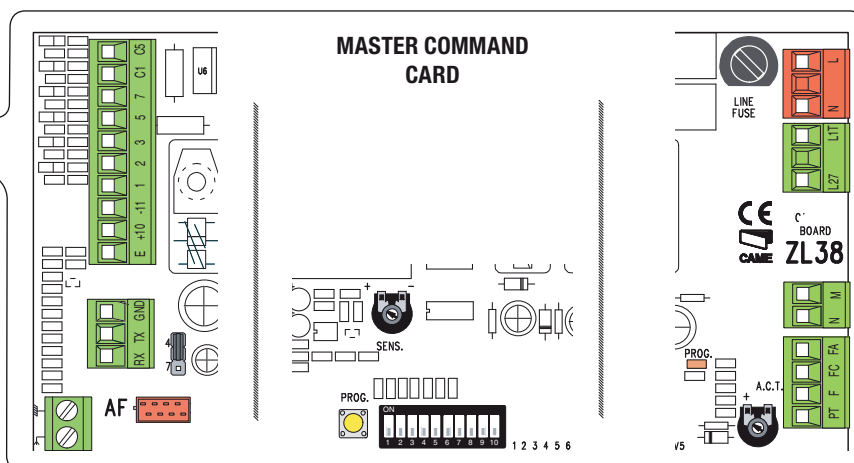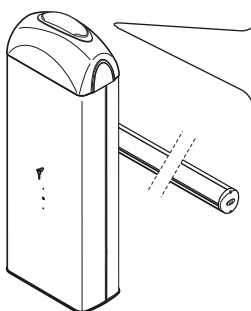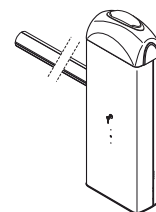


- On the pre-chosen Master command card, perform all the connections (see electrical connections paragraph)

the installation procedure for the remote control, settings and adjustments.

- on the pre-chosen Slave command card, set Dipswitch 7 to ON, perform power connection on terminal L-N, connect the device to 10-E terminal output, adjust to the same speed and deceleration as for the Master barrier.

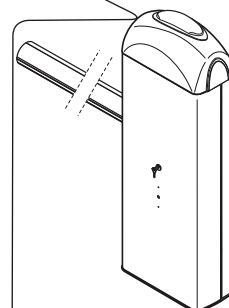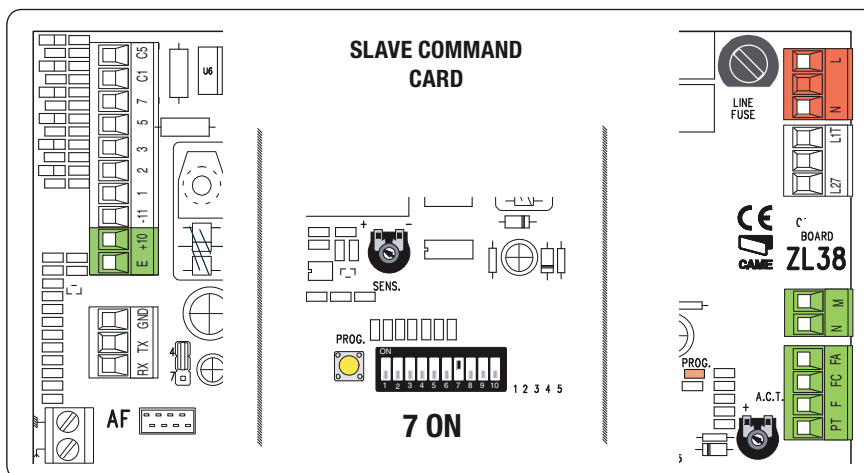

- Perform connection between two command cards through RX-TX GND terminals.

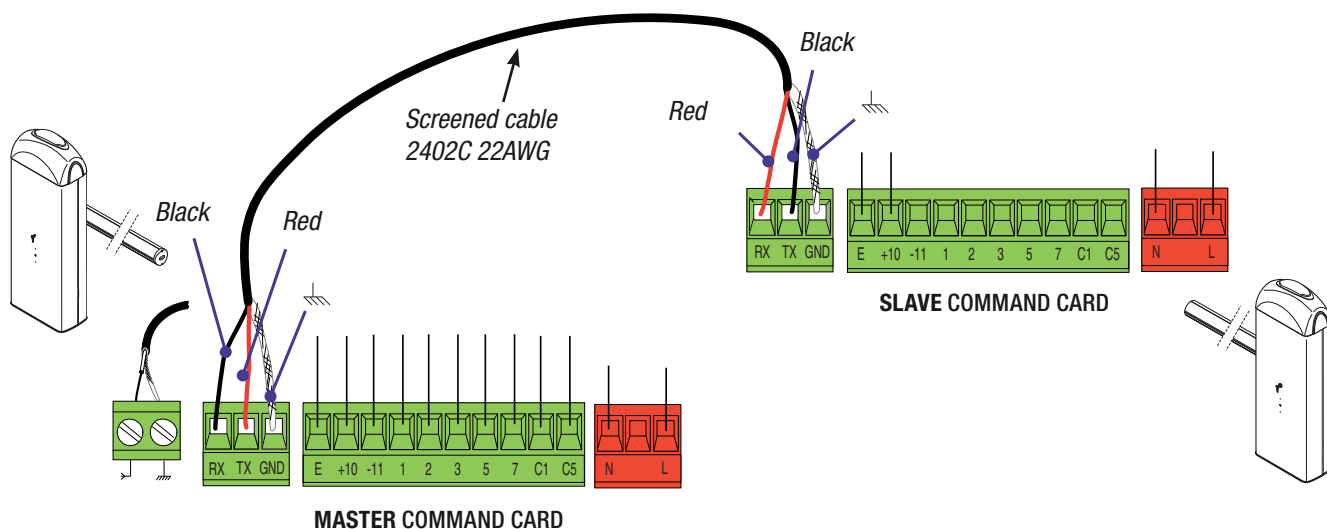


## 9 Safety instructions

### Important safety instructions

This product must only be employed for its originally intended use. Any other use is wrong and potentially dangerous. The manufacturer cannot be held liable for any damages resulting from wrongful, erroneous or negligent uses.

Avoid using near mechanical moving parts. Stay out of the opening/closing arc when operator is in motion.

Do not exercise force against the motion of the operator as this could result in potentially dangerous situations.

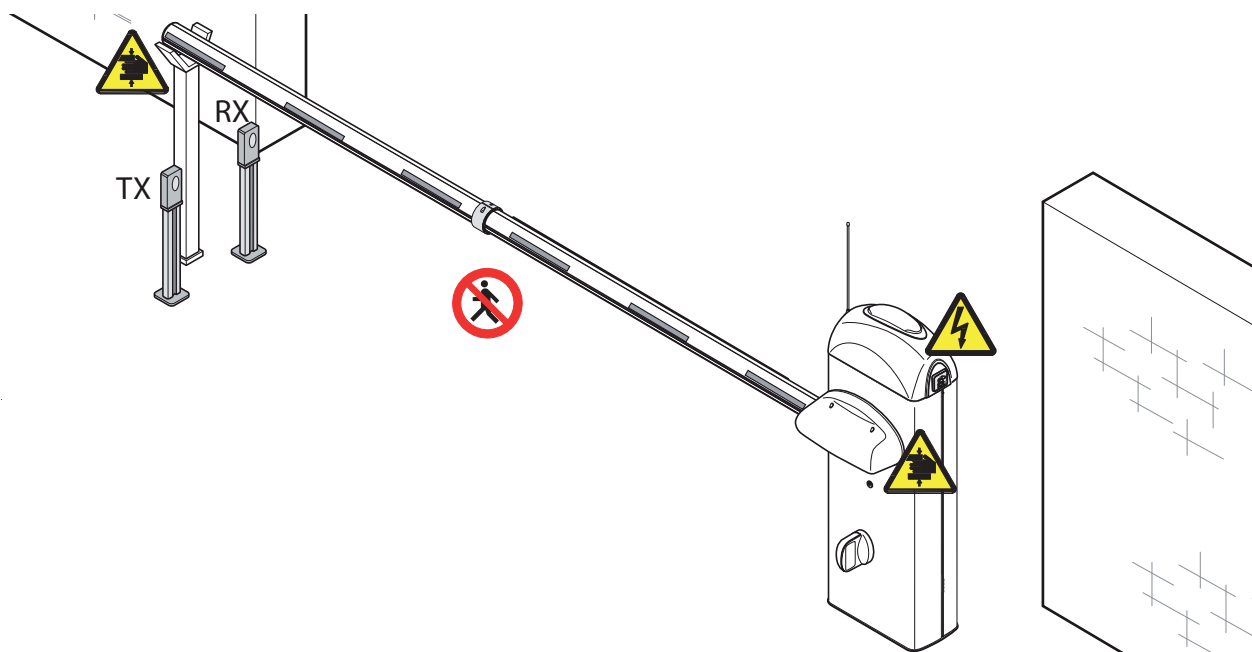

Do not allow children to play or loiter within the opening/closing arc of the operator. Keep remote controls and any other command device out the reach of children, to prevent operator from being activated by accident.

In the event of anomalous behaviour, stop using the operator immediately.



Danger of crushing hands




Danger! High voltage



No transit during operation

## 10 Maintenance

### 10.2 Periodic maintenance

 Periodic maintenance to be carried out by the end-user is as follows: wipe clean the glass surface of the photocells; check that the safety devices work properly; remove any obstruction.

We suggest checking the state of lubrication and tightness of the anchoring screws on the operator.


-To check the efficiency of the safety devices, move an object in front of the photocells when gate is closing. If the operator inverts the motion or stops, the photocells are working properly.

This is the only maintenance procedure to be carried out with the power source connected

-Before performing any maintenance procedures, cut off the main power, to prevent possible accidents due to bar movement.


-To clean the photocells use a water dampened cloth. Do not use solvents or other chemical products which may ruin the devices.

-Make sure there are no plants within the photocell's beam, and that the bar motion is free of any obstacles.

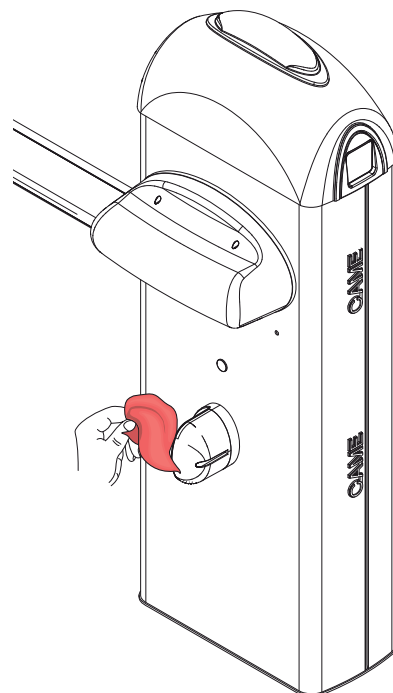

[illegible]

## 10.2 Extra-ordinary maintenance

 The following table serves to note down any extraordinary maintenance, repairs or improvements performed by specialised firms.

N.B.: Any extraordinary maintenance must be performed by specialised technicians.

### Extra-ordinary maintenance log

|                     |                        |
|---------------------|------------------------|
| Installer's stamp   | Operator name          |
|                     | Date of job            |
|                     | Technician's signature |
|                     | Requester's signature  |
| Job performed _____ |                        |
| _____               |                        |
| _____               |                        |

|                     |                        |
|---------------------|------------------------|
| Installer's stamp   | Operator name          |
|                     | Date of job            |
|                     | Technician's signature |
|                     | Requester's signature  |
| Job performed _____ |                        |
| _____               |                        |
| _____               |                        |

|                     |                        |
|---------------------|------------------------|
| Installer's stamp   | Operator name          |
|                     | Date of job            |
|                     | Technician's signature |
|                     | Requester's signature  |
| Job performed _____ |                        |
| _____               |                        |
| _____               |                        |

|                     |                        |
|---------------------|------------------------|
| Installer's stamp   | Operator name          |
|                     | Date of job            |
|                     | Technician's signature |
|                     | Requester's signature  |
| Job performed _____ |                        |
| _____               |                        |
| _____               |                        |

|                     |                        |
|---------------------|------------------------|
| Installer's stamp   | Operator name          |
|                     | Date of job            |
|                     | Technician's signature |
|                     | Requester's signature  |
| Job performed _____ |                        |
| _____               |                        |
| _____               |                        |

|                     |                        |
|---------------------|------------------------|
| Installer's stamp   | Operator name          |
|                     | Date of job            |
|                     | Technician's signature |
|                     | Requester's signature  |
| Job performed _____ |                        |
| _____               |                        |
| _____               |                        |


## 10.4 Problem solving

| MALFUNCTIONS   | REFERENCES     | CHECKS  |
|--|----------------|---|
| The unit neither opens nor shuts                     | 1-2-3-4-6-8-18 | 1 - Use key to lock trap door                                     |
| The unit opens but does not close                    | 4-7-10         | 2 - Disable "steady movement" with dipswitch                      |
| The unit shuts but does not open                     | 4-7-9          | 3 - Check power supply and fuses                                  |
| No automatic closure                                 | 11-12-13       | 4 - N.C. safety contacts open (1-2 / 2-C1 / 2-C5)                 |
| The unit does not work if the remote control is used | 2-14-16        | 6 - Disable master-slave function                                 |
| The unit inverts direction                           | 7-18           | 7 - Check spring tension and balancing                            |
| The unit works only with remote control              | 22             | 8 - Disable obstacle detection with dipswitch                     |
| The photoelectric cell does not react                | 12-23-24       | 9 - Check if end stop opens                                       |
| The signalling LED indicator flashes rapidly         | 4              | 10 - Check if end stop closes                                     |
| The signalling LED indicator remains on              | 13             | 11 - Activate "automatic closure" dip switch                      |
| The unit does not end its run                        | 7              | 12 - Check the correct direction of movement                      |
| The bar is not properly balanced                     | 7-15           | 13 - (2-3 / 2-4 / 2-7) command button                             |
| The unit does not slow down                          | 7-15           | 14 - Check jumper on AF43S, turn on/off power                     |
| The unit does not work with the back-up batteries    | 8-25-26        | 15 - Check the bar length ratio with mountable accessories        |
| The unit is slow to respond                          | 7              | 16 - Re-save radio code   |
|  |                | 18 - Adjust sensitivity   |
|  |                | 22 - Enter or duplicate the same code in all the remote controls  |
|  |                | 23 - Activate the photoelectric cell with the dipswitch           |
|  |                | 24 - Connect the photoelectric cells in a series, not in parallel |
|  |                | 25 - Dead batteries   |
|  |                | 26 - Respect the photoelectric cells' polarity                    |

## 11 Demolition and disposal


 In its premises, CAME CANCELLI AUTOMATICI S.p.A. implements an Environmental Management System certified in compliance with the UNI EN ISO 14001 standard to ensure environmental protection.

Please continue our efforts to protect the environment—which CAME considers one of the cardinal elements in the development of its operational and market strategies—simply by observing brief recommendations as regards disposal:

 **DISPOSAL OF PACKAGING** – The packaging components (cardboard, plastic, etc.) are all classifiable as solid urban waste products and may be disposed of easily, keeping in mind recycling possibilities.

Prior to disposal, it is always advisable to check specific regulations in force in the place of installation.

**PLEASE DISPOSE OF PROPERLY!**

 **PRODUCT DISPOSAL** – Our products are made up of various types of materials. Most of them (aluminium, plastics, iron, electrical wires, etc.) may be disposed of in normal garbage collection bins and can be recycled by disposing of in specific recyclable material collection bins and disposal in authorized centres. Other components (electrical boards, remote control batteries, etc.), however, may contain polluting substances. They should therefore be removed and given to qualified service companies for proper disposal. Prior to disposal, it is always advisable to check specific regulations in force in the place of disposal.

**PLEASE DISPOSE OF PROPERLY!**



Came Cancelli Automatici s.p.a.

|          |                           |           |         |             |        |
|----------|---------------------------|-----------|---------|-------------|--------|
| address  | Via Martiri della Libertà | Street n. | 15      | postal code | 31030  |
| location | Dossone di Casier         | province  | Treviso | state       | Italia |

**DECLARES THAT THE PARTLY COMPLETED MACHINERY****AUTOMATIC ROAD BARRIERS**

G2080Z; G2080IZ; G2081Z;  
 G4040Z; G4040IZ; G4041Z;  
 G2500; G2500N; G2510;  
 G3250; G3750; G3751;  
 G3000DX; G3000SX; G3000IX; G3000ISX;  
 G4000C; G4000D; G4000E; G4000N; G4001; G4001E; G4010; G4011;  
 G6000; G6000B; G6000E; G6001; G6001E; G6010; G6011;  
 G6500; G6501;  
 G12000; G12000A; G12000B  
 G02040; G04060; G06080  
 G02801; G02803;  
 G03755DX; G03755SX

**MEET THE APPLICABLE ESSENTIAL REQUIREMENTS**

1.1.3 - 1.1.5 - 1.2.1 - 1.2.2 - 1.3.2 - 1.3.7 - 1.3.8.1 - 1.4.1 - 1.4.2 - 1.4.2.1 - 1.5.1 - 1.5.6 - 1.5.8 -  
 1.5.9 - 1.5.13 - 1.6.1 - 1.6.3 - 1.6.4 - 1.7.1 - 1.7.2 - 1.7.4

**COMPLIES WITH THE PROVISIONS OF THE FOLLOWING DIRECTIVES**

DIRECTIVE 2006/42/EC OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL  
 of 17 May 2006 on machinery, and amending Directive 95/16/EC.

DIRECTIVE 2004/108/EC OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL  
 of 15 December 2004 on the approximation of the laws of the Member States relating to electromagnetic compatibility.

**PERSON AUTHORISED TO COMPILE THE RELEVANT TECHNICAL DOCUMENTATION**

Came Cancelli Automatici s.p.a.

|          |                           |           |         |             |        |
|----------|---------------------------|-----------|---------|-------------|--------|
| address  | Via Martiri della Libertà | Street n. | 15      | postal code | 31030  |
| location | Dossone di Casier         | province  | Treviso | state       | Italia |

The pertinent technical documentation has been drawn up in compliance with attached document IB

Came Cancelli Automatici S.p.A., following a duly motivated request from the national authorities, undertakes to provide information related to the quasi machines,

**and FORBIDS**

commissioning of the above mentioned until such moment when the final machine into which they must be incorporated, has been declared compliant, if pertinent, to 2006/42/CE.

Dossone di Casier (TV)  
 01 Feb 2011

Gianni Michielan  
 Managing Director

DDI BEN 0001 ver. 4.2 01 February 2011  
 Translation of the Declaration in the original language

Came Cancelli Automatici s.p.a.

Via Martiri della Libertà, 15 - 31030 Dossone di Casier - Treviso - Italy - Tel. (+39) 0422 4940 - Fax (+39) 0422 4941  
 info@came.it - www.came.com

Cap. Soc. 1.610.000,00 € - C.F. e P.I. 03481280265 - VAT IT 03481280265 - REA TV 275359 - Reg Imp. TV 03481280265

**CAMEGROUP**  
 TRANSMITTORI







|   |               |          |  |
|---|---------------|----------|--|
| <b>CAME France S.a.</b><br>7, Rue Des Haras<br>Z.i. Des Hautes Patures<br>92737 <b>Nanterre Cedex</b><br>☎ (+33) 0 825 825 874<br>☎ (+33) 1 46 13 05 00                 | FRANCE        | GERMANY  | <b>CAME Gmbh Seefeld</b><br>Akazienstrasse, 9<br>16356 <b>Seefeld</b> Bei Berlin<br>☎ (+49) 33 3988390<br>☎ (+49) 33 39883985  |
| <b>CAME Automatismes S.a.</b><br>3, Rue Odette Jasse<br>13015 <b>Marseille</b><br>☎ (+33) 0 825 825 874<br>☎ (+33) 4 91 60 69 05  | FRANCE        | U.A.E.   | <b>CAME Gulf Fze</b><br>Office No: S10122a2o210<br>P.O. Box 262853<br>Jebel Ali Free Zone - <b>Dubai</b><br>☎ (+971) 4 8860046<br>☎ (+971) 4 8860048                 |
| <b>CAME Automatismos S.a.</b><br>C/juan De Mariana, N. 17-local<br>28045 <b>Madrid</b><br>☎ (+34) 91 52 85 009<br>☎ (+34) 91 46 85 442                                  | SPAIN         | RUSSIA   | <b>CAME Rus</b><br><b>Umc Rus Llc</b><br>Ul. Otradnaya D. 2b, Str. 2, office 219<br>127273, <b>Moscow</b><br>☎ (+7) 495 739 00 69<br>☎ (+7) 495 739 00 69 (ext. 226) |
| <b>CAME United Kingdom Ltd.</b><br>Unit 3 Orchard Business Park<br>Town Street, Sandiacre<br><b>Nottingham</b> - Ng10 5bp<br>☎ (+44) 115 9210430<br>☎ (+44) 115 9210431 | GREAT BRITAIN | PORTUGAL | <b>CAME Portugal</b><br><b>Ucj Portugal Unipessoal Lda</b><br>Rua Liebig, nº 23<br>2830-141 <b>Barreiro</b><br>☎ (+351) 21 207 39 67<br>☎ (+351) 21 207 39 65        |
| <b>CAME Group Benelux S.a.</b><br>Zoning Ouest 7<br>7860 <b>Lessines</b><br>☎ (+32) 68 333014<br>☎ (+32) 68 338019  | BELGIUM       | INDIA    | <b>CAME India</b><br><b>Automation Solutions Pvt. Ltd</b><br>A - 10, Green Park<br>110016 - <b>New Delhi</b><br>☎ (+91) 11 64640255/256<br>☎ (+91) 2678 3510         |
| <b>CAME Americas Automation Llc</b><br>11345 NW 122nd St.<br><b>Medley, FL</b> 33178<br>☎ (+1) 305 433 3307<br>☎ (+1) 305 396 3331                                      | U.S.A         | ASIA     | <b>CAME Asia Pacific</b><br>60 Alexandra Terrace #09-09<br>Block C, The ComTech<br>118 502 <b>Singapore</b><br>☎ (+65) 6275 0249<br>☎ (+65) 6274 8426                |
| <b>CAME Gmbh</b><br>Kornwestheimer Str. 37<br>70825 <b>Korntal</b> Munchingen Bei Stuttgart<br>☎ (+49) 71 5037830<br>☎ (+49) 71 50378383                                | GERMANY       |          |  |

**CAME Cancelli Automatici S.p.a.**  
Via Martiri Della Libertà, 15  
31030 **Dossan Di Casier** (Tv)  
☎ (+39) 0422 4940  
☎ (+39) 0422 4941  
Informazioni Commerciali 800 848095

ITALY

ITALY

**CAME Sud s.r.l.**  
Via F. Imparato, 198  
Centro Mercato 2, Lotto A/7  
80146 **Napoli**  
☎ (+39) 081 7524455  
☎ (+39) 081 7529190

**CAME Service Italia S.r.l.**  
Via Della Pace, 28  
31030 **Dossan Di Casier** (Tv)  
☎ (+39) 0422 383532  
☎ (+39) 0422 490044  
**Assistenza Tecnica 800 295830**

ITALY

ITALY

**CAME Global Utilities s.r.l.**  
Via E. Fermi, 31  
20060 **Gessate** (Mi)  
☎ (+39) 02 95380366  
☎ (+39) 02 95380224