


somfy.com

Dexxo Pro 800 - 1000 RTS User Manual

GB

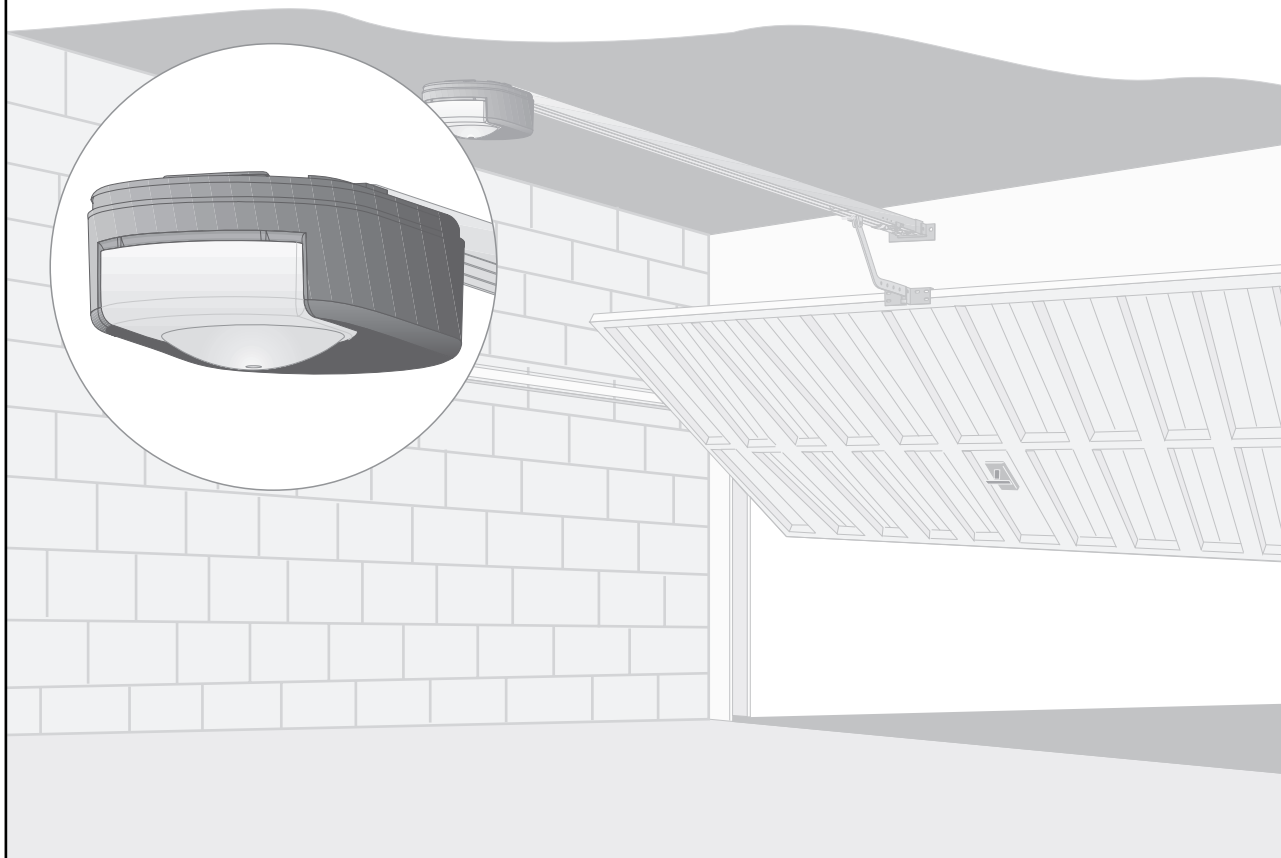

5048551A

HOME
MOTION BY

somfy®

GB

CONTENTS

GENERAL PRESENTATION	2
The world of Somfy	2
Support	2
SAFETY INSTRUCTIONS	3
Standards	3
Safety instructions	3
PRODUCT PRESENTATION	3
Description	3
OPERATION AND USE	4
Normal operation	4
Special operation	5
TROUBLESHOOTING	6
PERIPHERALS	6
Description of the different peripherals available	6
MAINTENANCE	7
Replacing the bulb	7
Checking the obstacle detection function	7
Checking the safety mechanisms	7
Checking the back-up battery	7
TECHNICAL SPECIFICATIONS	7
NOTES	8

GENERAL PRESENTATION

Thank you for choosing a Somfy product. This product is designed and manufactured by Somfy in line with quality procedures that are ISO 9001 compliant.

The world of Somfy

Somfy develops, produces and sells automation systems for residential and commercial applications. Alarm systems, automatic blinds and shutters, garage doors and gates – all Somfy products are designed to fulfill your needs in terms of safety, comfort and security.

At Somfy, the quest for quality is a continual process. Somfy has built its reputation on the quality of its products and is synonymous with innovation and technological leadership worldwide.

Support

Getting to know you, listening, answering your needs, is all part of the Somfy approach.

Please contact your local Somfy retailer or installer for details on other Somfy products.

Internet: www.somfy.com

SAFETY INSTRUCTIONS

Standards

This product complies with the “safety, specific rules for powering vertically opening garage doors in residential use” requirements (standard EN 60335-2.95). When installed in line with these instructions and in compliance with the “Installation Checklist”, the product will be compliant with standards EN 13241-1 and EN 12453.

The instructions referred to in the Installation Manual and Instructions for Use of this product are designed to ensure that damage to property and injury to persons is avoided along with compliance with the above standards. Failure to comply with these instructions absolves Somfy from any liability for any damage that may be caused. Dexxo Pro is a product that must be installed inside the garage with a built-in back-up control system.

Somfy hereby declares that the device is compliant with the essential demands and other relevant requirements of directive 1999/5/CE.

A declaration of compliance is available from the web site at www.somfy.com/CE (Dexxo Pro).

This product is usable in the European Union and in Switzerland.

GB

 **These are important safety instructions. For safety reasons, it is important to always follow all instructions. Retain these instructions for future reference.**

Safety instructions

Every month, test that the motor drive unit reverses its motion when it encounters an obstacle that is at least 50 mm from ground level. If this is not the case, call your installation specialist. Always be very careful when using the manual release cord for a manually operated door may fall quickly due to weak or broken springs or if it is badly balanced.


Before manually operating the door or performing maintenance work, always turn the power off and where necessary remove the battery (**Fig. 1**).

Never let children play with door control systems. Keep the remote controls out of reach of children (**Fig. 2**).

When replacing the light bulb, select a 230 V 40 W E14 type (**Fig. 3**).

Regularly check the operation of the door to identify any sign of wear, deterioration or incorrect balancing. Do not operate the door if repairs or adjustments are required.

Remain at a safe distance when operating the door.

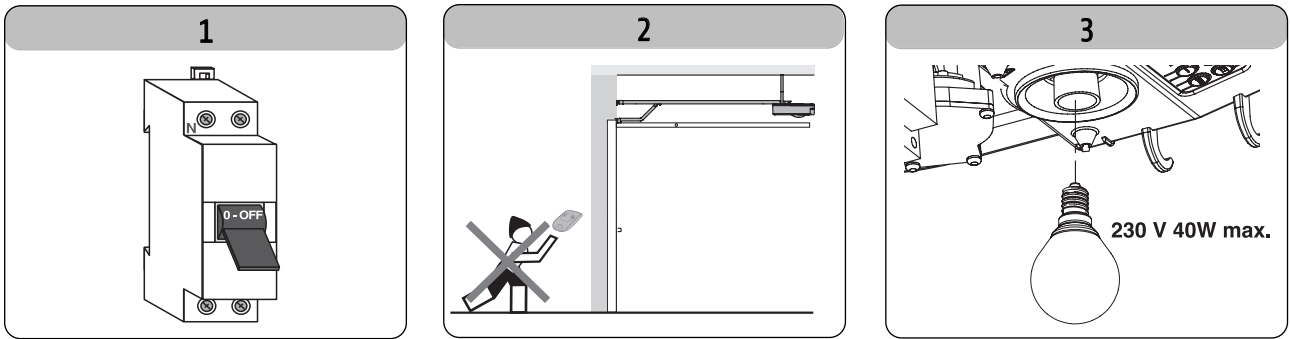


PRODUCT PRESENTATION

Description (Fig. 4)

The Dexxo PRO system is designed to power garage doors in residential use. This motor drive system comprises:


- . A motor head (1) with integrated light (2) and digital operating display (5).
- . A rail assembly (3) with a manual release cord (4).

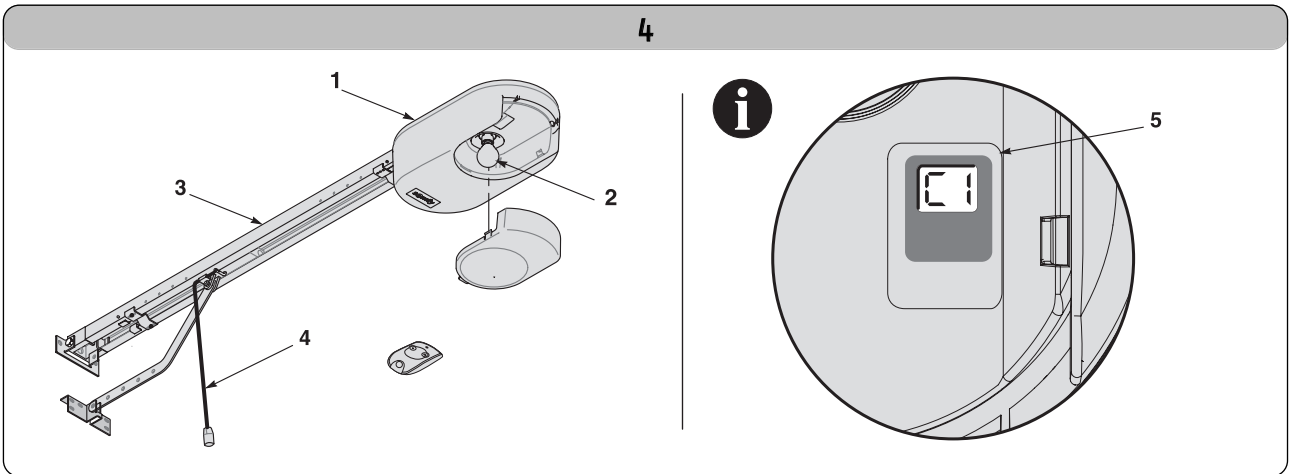

OPERATION AND USE

Normal operation

Using Keytis or similar remote controls (Fig. 5).

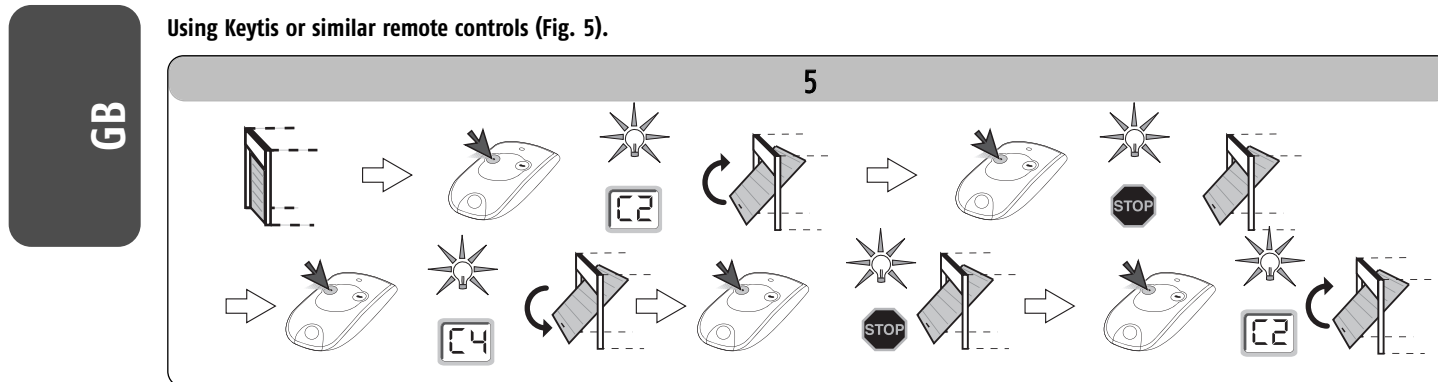


Obstacle detection operation (Figs. 6 and 7)

When an obstacle is detected during the open cycle, the door will stop (**Fig. 6**).

When an obstacle is detected during the close cycle, the door will stop and then reopen (Fig. 7).

Once an obstacle has been detected, the light will flash for 30 seconds.

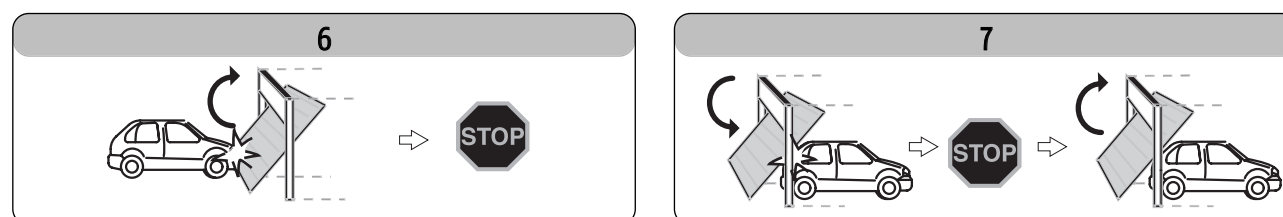

Light operation


The light will come on each time the motor drive unit is operated. The light will go out one minute after the door stops moving.

Repetitive use that causes the light to be continually on may result in a thermal cut out (this will automatically turn the light off).

Manual release cord operation (Figs. 8 and 9)

Dexxo Pro is fitted with a manual release mechanism so that you can move the door manually should a power failure occur, for example. The manual release mechanism should be easily accessible and located **no more than 1.80 metres** above floor level.

- [1]. Disengaging the motor drive mechanism**
Pull on the manual release cord until the door drive mechanism is disengaged.
- [2]. Manually moving the door**
This is possible as long as the door drive mechanism is disengaged.
- [3]. Reengaging the motor drive mechanism**
Move the door manually until the drive mechanism comes to reengage itself into the transmission rail.

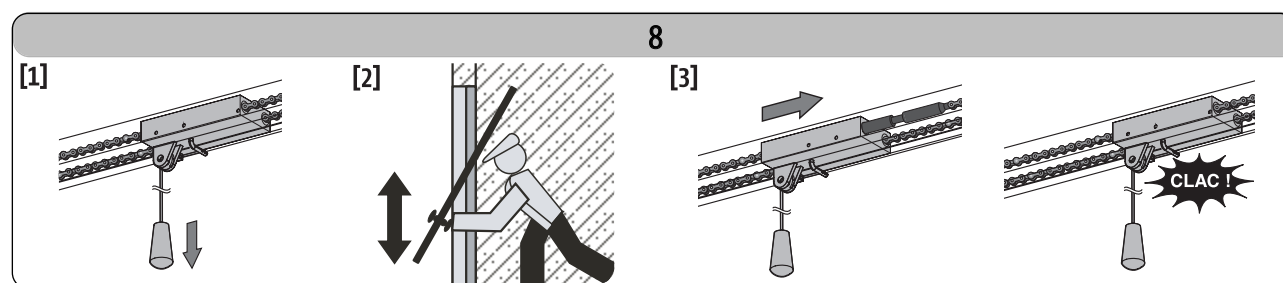

 **When disengaging the motor drive mechanism, use caution for a badly balanced door may cause sudden door movement that may be dangerous.**


 **Only use the cord to disengage the motor drive mechanism. Never use the cord to move the door manually.**

 Always reengage the motor drive mechanism before sending another command to the motor drive unit.

Special operation

Depending on the peripherals installed and the operating options set by your installer, the Dexxo PRO system may perform the following special operations:

Using Telis or similar remote controls (Fig. 9).

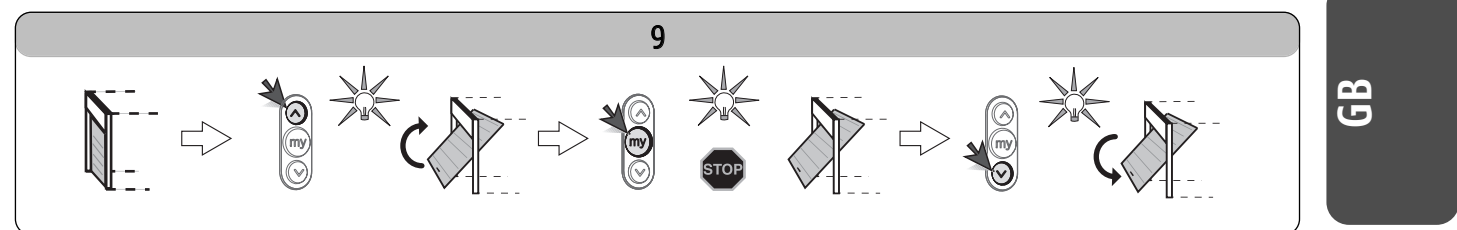

Safety photoelectric cell operation.

An obstacle detected between the cells will prevent the door from closing.

The door will stop and then completely or partially reopen (depending on the setup selected during installation) when an obstacle is detected during the close cycle.

The light will flash for 30 seconds during this process.

Pedestrian door safety function.

Opening a pedestrian door within the garage door will prevent the door from moving.

The light will flash for 30 seconds during this process.

Flashing orange light


The orange warning light will flash every time the door moves.

A two second delay before the door starts to move can be selected during installation.

Remote lighting operation

The light comes on every time the motor drive unit is operated. The light will go out one minute after the door stops moving. The time delay can be adjusted during installation.

If a remote control button is programmed for remote lighting, it works as illustrated in (Fig. 10).

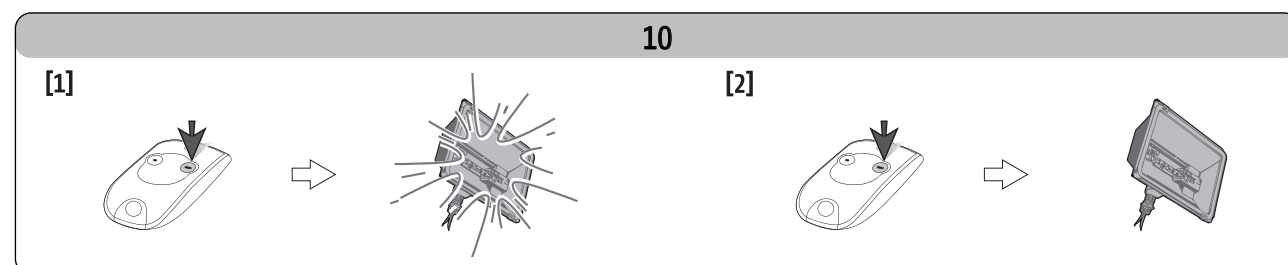

Partial opening operation.

If this option is selected:

- . A short press on the remote control button will partially open the door,
- . A long press on the remote control button will fully open the door.

The partially open position will only operate from the closed position.

Automatic closure mode operation.

The door is automatically closed after a time delay set at the time of installation.

An additional command during this time will cancel the automatic closure and the door will remain open.

The next command will close the door.

Working from the back-up battery.

If a back-up battery is installed, the Dexxo PRO motor will operate when a power cut occurs.

The following conditions apply to operation:

- . Door speed is reduced.
- . The light will not come on.
- . The safety devices are disabled.

Battery specifications:

- . Endurance: The battery will last for 24 hours with a maximum of 5 to 10 operating cycles depending on the weight of the door.
- . Recharging time: 48 hours.
- . Service life prior to replacement: approx. three years.

To ensure optimum battery life, we recommend that the power to the motor is switched off and the door is operated for a number of cycles using battery power (three times a year).

GB

TROUBLESHOOTING


The LCD display is situated under the lighting cover. It provides motor operation status.
The main operating codes are as follows:

Code	Description	Comments
C1	Waiting for a command	
C2	Door opening	
C3	Waiting for the door to close	
C4	Door closing	
C5	Obstacle detection	Indicates that the door encountered an obstacle. The display is maintained for 30 s after detection.
C6	Safety input active	Indicates that an obstacle preventing door closure is present between the photoelectric cells or is in contact with the safety sensor bar installed on the door.
C9	Pedestrian door safety contact active	Indicates that the pedestrian door within the garage door is open. Door operation is inhibited.
Cb	Permanent hardwired control	Indicates that the hardwired control input is permanently active. Commands from radio remote control units are inhibited.
Cd	Working from back-up battery Waiting for a command	Indicates that the main power supply to the motor is cut and that the motor is powered by the battery back-up pack.

If other codes are displayed, contact your Somfy installer.

PERIPHERALS

A number of peripherals are available.

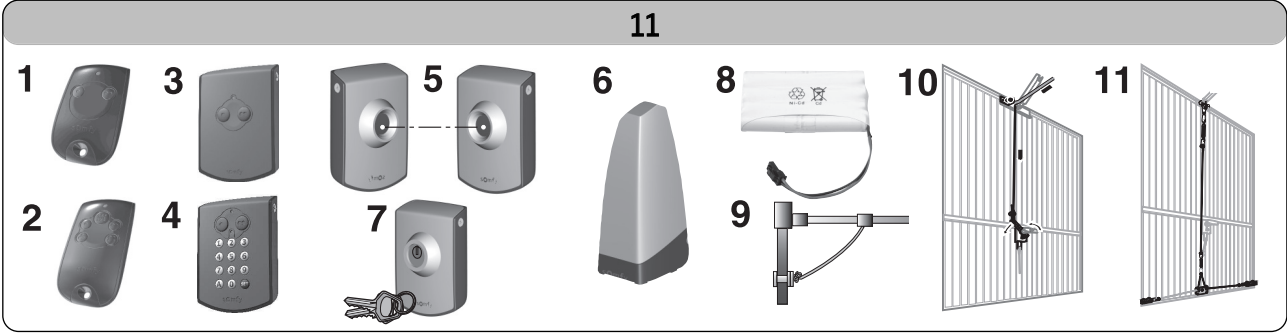


Key	Description	Comments
1	Keytis 2NS RTS remote control	Hand held 2 channel remote control.
2	Keytis 4NS RTS remote control	Hand held 4 channel remote control.
3	RTS pushbutton	Wall mounted 2 channel remote control switch.
4	RTS code keypad	Radio keypad for secure control.
5	Photoelectric cells	To prevent door closure if an obstacle is detected.
6	Orange light	To signal a warning when the door operates.
7	Keyswitch	Keyswitch for secure control.
8	Battery	To provide continued operation during a power cut.
9	Release lock	To engage the manual release system from the outside using the existing door handle. Highly recommended when the garage door is the only access point into the garage.
10	Outside release lock	To engage the manual release system from the outside using the existing door handle. Highly recommended when the garage door is the only access point into the garage.
11	Door locking kit	A system to reinforce door locking.

MAINTENANCE

Replacing the bulb in the light unit (Fig. 12)

- [1] [2]. Remove the light cover
- [3] [4]. Unscrew and replace the defective light bulb
- [5] [6] [7]. Refit the light cover
- Use a 230 V 40 W E14 socket light bulb

GB

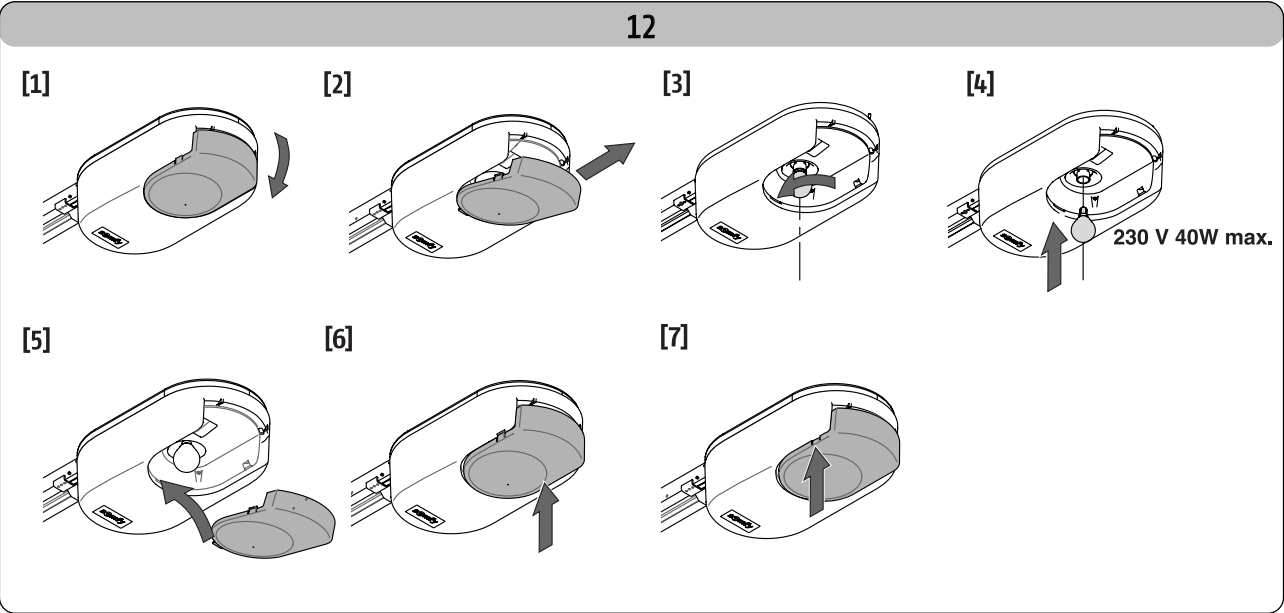

Checking the obstacle detection function

Every six months, check that the door reverses direction when an obstacle prevents the door from closing (at least 50 mm above floor level).

Checking the safety mechanisms (cells, pedestrian door contact, sensor bar)

Check correct operation every six months (refer to page 5).

Checking the back-up battery

To ensure optimum battery life, we recommend that the power to the motor is switched off and the door is operated for a number of cycles using battery power (three times a year).

TECHNICAL SPECIFICATIONS

Basic technical specifications	Dexxo Pro 800	Dexxo Pro 1000
Mains supply	230 V 50 Hz	
Power consumed when on standby	5 W	
Max. power consumed	350 W (excluding remotely controlled lighting)	
Traction force	800 N	1000 N
Use	20 cycles per day with a standard rail (tested for 36,500 cycles) 50 cycles per day with a high performance rail (tested for 90,000 cycles)	
Number of channels that can be stored	32	
Somfy radio frequency	433.42 MHz RTS	
Integrated light	230 V / 40 W max. E14 socket	
Remote controlled lighting	230 V / 500 W max. Class 2 <input type="checkbox"/>	
Operating temperature	-20 °C / +60 °C	